

1911 MAINSPRING CAP - MAINSPRING CAP FOR 1911, BLUED, 1 PACK

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Caps](#)

U.S.-Made Parts For The 1911 Auto Pistol

Each and every part is U.S.-made, high-quality and guaranteed to fit and function just like the factory part.



Attributes

- Name: [MAINSPRING CAP FOR 1911, BLUED, 1 PACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 100000875
- Mfr. No.:
- Finish: Blued
- Make: 1911
- Model: Commander, Government
- Delivery weight: 0.045kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 050806029286

Item details

Made in USA

US export classification: 0A501.y.1

Table of Contents

- Startpage
- Safety Instruction Guide for 1911 Mainspring Cap
- About Us

Safety Instruction Guide for 1911 Mainspring Cap

Introduction

Thank you for choosing the 1911 Mainspring Cap. This product is designed for use with 1911 Auto models, including Government and Commander types. It is crafted from U.S.made, highquality carbon steel and features a blued finish. To ensure your safety and the proper functioning of this product, please read this guide carefully.

General Safety Guidelines

- Ensure that all parts are compatible with your specific model of the 1911 Auto.
- Always inspect the mainspring cap for any signs of damage or wear before installation.
- Handle all firearm components with care and respect to prevent accidents.
- Keep all firearm parts out of reach of children and unauthorized users.
- Report any unsafe products or incidents to the appropriate authorities.
- Stay updated on recalls and safety alerts via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use only in accordance with the manufacturer's instructions.
- Do not modify the mainspring cap or any other firearm components.
- Ensure that the firearm is unloaded before attempting to install or replace the mainspring cap.
- Wear safety glasses and gloves when handling firearm components to protect against injury.
- Check that the mainspring cap is securely installed before using the firearm.

Instructions for Installation and Usage

1. Preparation:

- Ensure that the firearm is completely unloaded.
- Gather necessary tools for installation, such as a screwdriver and a punch tool.

2. Removing the Old Mainspring Cap:

- Locate the mainspring cap on your 1911 Auto.
- Use the punch tool to carefully remove the old mainspring cap, taking care not to damage surrounding components.

3. Installing the New Mainspring Cap:

- Align the new mainspring cap with the mainspring housing.
- Gently press the new mainspring cap into place using the punch tool.
- Ensure that it is seated properly and securely.

4. Final Check:

- Once installed, check that the mainspring cap is firmly in place.
- Conduct a function check of the firearm to ensure proper operation.

Disposal Instructions

- Dispose of any old or damaged parts in accordance with local regulations.
- Do not dispose of firearm components in regular household waste.
- Consider recycling options for metal parts where available.

Contact Information for Further Support

For any questions or concerns regarding the 1911 Mainspring Cap, please reach out to the manufacturer's customer support team or consult your local firearms dealer for assistance.

Thank you for prioritizing safety and compliance with the EU General Product Safety Regulation. Your responsible use of this product contributes to a safer environment for all.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at