

FLAT WIRE RECOIL SPRINGS FOR GLOCK® - 18 LB. SPRING GLOCK® 19

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Designed For Maximum Consistency & Reliability

CAD designed and built to Aerospace specifications from chrome silicon, corrosion resistant, stainless steel or chrome vanadium for maximum durability, consistency and reliable performance. Built to aerospace specifications; heat treated, shot peened and fully stress relieved to minimize spring set. GLOCK® RECOIL SPRINGS - Flat wire, chrome vanadium alloy,, wound to fit factory diameter guide rod of .250" or less. GLOCK® 17 fits large frame 17,17L,20,21,22,24,31,35. Factory weight is 17 lb. GLOCK® 19 fits 19,23,25,32. Factory weight is 18 lb.



Attributes

- Name: [18 LB. SPRING GLOCK® 19](#)
- Manufacturer: [ISMI](#)
- Product no.: 100002623
- Mfr. No.: GLC18
- Make: Glock
- Model: 19
- Pounds: 18 lbs
- Delivery weight: 0.005kg
- Shipping height: 13mm
- Shipping width: 79mm
- Shipping length: 211mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for FLAT WIRE RECOIL SPRINGS FOR GLOCK® 18 LB. SPRING GLOCK® 19
- About Us

Safety Instruction Guide for FLAT WIRE RECOIL SPRINGS FOR GLOCK® 18 LB. SPRING GLOCK® 19

Introduction

Thank you for choosing the FLAT WIRE RECOIL SPRINGS FOR GLOCK® 18 LB. SPRING GLOCK® 19. This product is designed for maximum durability and reliable performance in your Glock firearm. To ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR), please follow the safety instructions outlined in this guide.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always handle firearms with care and follow local laws and regulations.
- Store the recoil spring in a safe and dry location, away from children and pets.
- Regularly inspect the recoil spring for signs of wear or damage.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not exceed the manufacturer's recommended specifications when using the recoil spring.
- Ensure that the recoil spring is properly installed before using your firearm.
- Avoid using the recoil spring if it shows signs of damage or deformation.
- Always wear appropriate safety gear when handling firearms.
- Keep the area around the firearm free of obstructions and distractions during use.

Instructions for Installation and Usage

1. Preparation:

- Ensure that the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation.

2. Installation:

- Remove the factory guide rod and spring from the firearm.
- Carefully install the FLAT WIRE RECOIL SPRING onto the factory diameter guide rod of .250" or less.
- Ensure that the spring is seated properly and securely.

3. Usage:

- After installation, test the firearm in a safe environment to ensure proper function.
- Follow all standard safety protocols when operating the firearm.

4. Maintenance:

- Regularly clean and inspect the recoil spring for any signs of wear or corrosion.
- Replace the recoil spring if any damage is observed.

Disposal Instructions

- Dispose of the recoil spring in accordance with local regulations.

- Do not dispose of the recoil spring in regular household waste.
- Consider recycling options for metal components.

Contact Information for Further Support

For any safety inquiries or further assistance, please contact your local distributor or the manufacturer directly. Ensure that you have your product details ready for reference.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your FLAT WIRE RECOIL SPRINGS FOR GLOCK® 18 LB. SPRING GLOCK® 19. Thank you for your attention to these important safety guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at