

M1 GARAND OPERATING ROD SPRING - FULTON ARMORY M1 OP ROD SPRING

[Rifle Parts](#) > [Receiver Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Ensures Reliable Feeding & Extraction

Brings back reliable extraction and feeding cycles to a Garand that has a worn-out or kinked spring. Made to original USGI specifications, and perfect for putting the "spring" back into an old rifle. Keep a spare on hand as a backup.

Attributes

- Name: [FULTON ARMORY M1 OP ROD SPRING](#)
- Manufacturer: [FULTON ARMORY](#)
- Product no.: 100005274
- Mfr. No.: FA-A211-G
- Model: M1 Garand
- Weapon type: Springfield
- Delivery weight: 0.023kg
- Shipping height: 10mm
- Shipping width: 114mm
- Shipping length: 196mm

Item details

Made in USA

Table of Contents

- Startpage
- M1 Garand Operating Rod Spring Safety Instruction Guide
- About Us

M1 Garand Operating Rod Spring Safety Instruction Guide

Introduction

Thank you for choosing the M1 Garand Operating Rod Spring from Fulton Armory. This product is designed to restore reliable extraction and feeding cycles to your M1 Garand rifle. To ensure safe and effective use, please read this safety instruction guide carefully.

General Safety Guidelines

- Ensure proper installation and usage to avoid potential hazards.
- Regularly inspect the spring for wear and tear before use.
- Keep this product out of reach of children and vulnerable individuals.
- If you experience any issues during installation or usage, seek professional assistance.
- Report any unsafe products or accidents to local authorities.

Specific Safety Precautions for Use

- Always wear safety glasses when handling the spring to protect your eyes from potential debris.
- Handle the spring with care to avoid pinching or injury.
- Do not use the spring if it shows signs of damage, such as kinks or breaks.
- Ensure that the rifle is unloaded and pointed in a safe direction before installation.
- Follow all manufacturer instructions for your M1 Garand rifle when replacing the spring.

Instructions for Installation and Usage

1. Preparation:

- Ensure your workspace is clean and free from distractions.
- Gather necessary tools for installation, including a screwdriver and any other required equipment.

2. Installation Steps:

- Verify that the M1 Garand rifle is unloaded.
- Remove the existing operating rod spring from the rifle. Consult the rifle's user manual for specific removal instructions.
- Inspect the area for any debris or obstructions.
- Carefully insert the new M1 Garand Operating Rod Spring into the designated area.
- Ensure the spring is seated correctly and securely.
- Reassemble any parts removed during the installation process.

3. Usage:

- After installation, perform a function check to ensure the rifle operates smoothly.
- Regularly clean and maintain your rifle, including the new spring, to ensure optimal performance.

Disposal Instructions

- Dispose of any old or damaged springs in accordance with local waste management regulations.
- Do not dispose of springs in regular household waste if they are deemed hazardous.
- Check with local authorities for proper disposal methods for metal components.

Contact Information for Further Support

For any inquiries or further assistance regarding the M1 Garand Operating Rod Spring, please refer to the manufacturer's contact details provided on the product packaging or official website.

By following these safety instructions, you can ensure a safe and enjoyable experience with your M1 Garand Operating Rod Spring. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk