

GUIDE ROD ASSEMBLY for GLOCK® - LONE WOLF DIST. GUIDE ROD ASSEMBLY, 20/21

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Spring Guide Rods](#)

Stainless Steel Prevents Rod Flex & Spring Bind For More Reliable Cycling

Hardened stainless steel guide rod won't break or flex and bind the spring like the factory plastic rod. Helps prevent cycling problems, improves reliability and overall performance. Features a captured, ISMI chrome silicon flat spring that's heat-treated, shot peened, and calibrated to the factory-spec 17 lb. weight. Steel Allen head screw and washer secure the spring to the rod, yet enable easy disassembly for spring replacement.



Attributes

- Name: [LONE WOLF DIST. GUIDE ROD ASSEMBLY, 20/21](#)
- Manufacturer: [LONE WOLF DIST.](#)
- Product no.: 100006203
- Mfr. No.: LWD-GRA2021
- Model: 20,21
- Weapon type: Glock
- Delivery weight: 0.036kg
- Shipping height: 18mm
- Shipping width: 41mm
- Shipping length: 114mm
- UPC: 859193000829

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for GUIDE ROD ASSEMBLY for GLOCK® LONE WOLF DIST.
- About Us

Safety Instruction Guide for GUIDE ROD ASSEMBLY for GLOCK® LONE WOLF DIST.

Introduction

Thank you for choosing the GUIDE ROD ASSEMBLY for GLOCK® from LONE WOLF DISTRIBUTORS. This product is designed to enhance the performance and reliability of your firearm. It is crucial to follow the safety guidelines outlined in this document to ensure safe and effective use.

General Safety Guidelines

- Ensure safe use of the GUIDE ROD ASSEMBLY by following all instructions.
- Always handle firearms with care and in accordance with local laws and regulations.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the guide rod and spring for wear or damage.
- Be aware of potential hazards associated with improper installation or use.

Specific Safety Precautions for Use

- Only use this guide rod assembly with compatible GLOCK models (Gen 13).
- Do not attempt to modify or alter the guide rod assembly in any way.
- Always wear appropriate eye and ear protection when handling firearms.
- Ensure that the firearm is unloaded before installation or maintenance.
- Follow the manufacturer's instructions for the safe handling and maintenance of your firearm.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools: a suitable Allen wrench for the screw.

2. Installation

- Remove the factory guide rod assembly from the firearm.
- Inspect the new GUIDE ROD ASSEMBLY for any visible defects.
- Insert the new guide rod assembly into the recoil spring housing.
- Attach the captured spring to the guide rod using the steel Allen head screw and washer.
- Ensure that all components are securely fastened.

3. Usage

- After installation, perform a function check of the firearm to ensure proper cycling.
- Test the firearm in a safe and controlled environment.
- Regularly check the guide rod and spring for signs of wear or damage.

Disposal Instructions

- Dispose of any old or damaged guide rod assemblies and springs in accordance with local regulations.
- Do not dispose of the product in regular household waste. Instead, consider recycling options where available.

Contact Information for Further Support

For any safety inquiries or support related to the GUIDE ROD ASSEMBLY, please reach out to the manufacturer's customer service or your local retailer.

Conclusion

By adhering to the safety guidelines and instructions provided in this document, you can ensure the safe and effective use of your GUIDE ROD ASSEMBLY for GLOCK® from LONE WOLF DISTRIBUTORS. Always prioritize safety and compliance with local laws when handling firearms.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk