


REVERSA TARGET STAND - MATTERHORN INNOVATIONS. 37" REVERSA TARGET STAND

[Shooting Accessories](#) > [Targets & Accessories](#) > [Target Stands](#)

Two, one-piece $\frac{1}{4}$ " diameter steel rods, each with two spring steel clips secure the sides of a cardboard target. Forked legs press into the ground for a rock-solid anchor. Stand and targets sold separately.

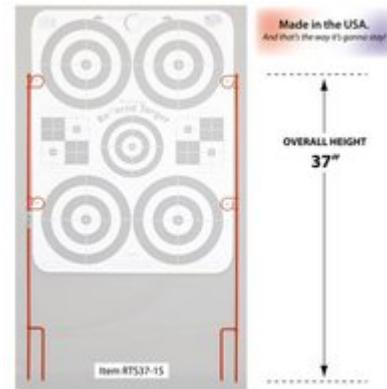

Attributes

- Name: [MATTERHORN INNOVATIONS. 37" REVERSA TARGET STAND](#)
- Manufacturer: [MATTERHORN INNOVATIONS.](#)
- Product no.: 100006685
- Mfr. No.: RTS37-1S
- Material: Steel
- Style: Stand
- Delivery weight: 0.68kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 940mm
- UPC: 022099577430

Item details

Made in USA

Table of Contents

- Startpage
- REVERSA TARGET STAND SAFETY INSTRUCTIONS
- About Us

REVERSA TARGET STAND SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the REVERSA TARGET STAND by Matterhorn Innovations. This product is designed to provide a reliable and sturdy platform for your shooting targets. Please read this safety instruction guide carefully to ensure safe and proper use of the product.

General Safety Guidelines

- Always inspect the target stand before use for any signs of damage or wear. Do not use if damaged.
- Ensure the stand is used on stable ground to prevent tipping or instability.
- Keep the target stand out of reach of children when not in use.
- Do not modify the target stand in any way, as this may compromise its safety.
- Always use the target stand in accordance with local laws and regulations regarding shooting activities.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Ensure that the area around the target stand is clear of people, animals, and obstructions before use.
- Use only cardboard targets that are compatible with the stand and within the specified dimensions.
- Avoid using the target stand in adverse weather conditions, such as high winds or heavy rain, which may affect stability.
- When setting up the target stand, ensure that the forked legs are securely pressed into the ground for maximum stability.
- Do not place excessive weight on the target stand beyond its intended use.

Instructions for Installation and Usage

1. Unpack the Target Stand

- Remove the target stand from the packaging.
- Ensure all components are present and undamaged.

2. Set Up the Target Stand

- Locate a level area free from obstructions.
- Position the target stand upright, ensuring the forked legs are on the ground.
- Press the forked legs firmly into the ground to secure the stand.

3. Attach the Target

- Use the two spring steel clips to secure the sides of the cardboard target to the stand.
- Ensure the target is centered and securely fastened to avoid any movement during use.

4. Check Stability

- Before using, doublecheck that the target stand is stable and secure.
- Adjust if necessary to ensure it is firmly anchored.

5. Using the Target Stand

- Always follow safe shooting practices while using the target stand.
- Ensure all participants are aware of the shooting range and follow safety protocols.

6. After Use

- Remove the target and clips from the stand.
- Store the target stand in a dry and safe location when not in use.

Disposal Instructions

- When the target stand reaches the end of its life, dispose of it in accordance with local regulations.
- Separate metal components from other materials for recycling where applicable.

Contact Information for Further Support

For any inquiries regarding safety, product information, or support, please refer to the manufacturer's contact information provided with the product.

Thank you for following these safety instructions. Your safety is our priority, and we hope you enjoy using the REVERSA TARGET STAND responsibly.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk