

1911 AUTO MAXBEVEL MAINSPRING HOUSING - STAN CHEN CUSTOMS 1911 AUTO MAXBEVEL MAINSPRING HOUSING, 30 LPI, BLUED

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Housings](#)

Larger Magazine Well Bevel for Faster Reloads with No Extra Bulk Unique design allows the custom gunsmith to seamlessly cut the bevel of the magwell back into the mainspring housing, allowing a much larger magwell opening without an add on magwell. Proprietary BevelBlock™ fitting block of extra material on the front ledge of the mainspring housing forms a seamless butt joint with the frame, deep into the frame's magazine well. The BevelBlock now comes pre-machined with an angled rear bevel to make installation even simpler, while still allowing the gunsmith to shape to their own profile, if desired. Allows shooters to hit the sweet spot at the rear of the magwell during combat reloads. Machined to maximum dimensions to deliver a nice snug fit in most 1911 frames without excessive material removal. Perfect for carry applications to greatly increase the magwell opening with no extra bulk. Requires one simple machine cut for installation before final shaping. Available in flat and smooth, or custom quality checkered at 20, 25 or 30 lines per inch by master metalsmith Pete Single. Perfectly formed diamonds improve grip and control during rapid fire. Rounded heel increases shooting and carry comfort. Precision machined from tough, solid barstock for extreme durability.



Attributes

- Name: [STAN CHEN CUSTOMS 1911 AUTO MAXBEVEL MAINSPRING HOUSING, 30 LPI, BLUED](#)
- Manufacturer: [STAN CHEN CUSTOMS](#)
- Product no.: 100019364
- Mfr. No.: CMSH-30-BL
- Finish: Blued
- Weapon type: 1911
- Delivery weight: 0.118kg
- Shipping height: 32mm
- Shipping width: 152mm
- Shipping length: 229mm

Item details

Made in USA

US export classification: 0A501.y.1

Table of Contents

- Startpage
- Consumer Safety Instruction Guide for 1911 AUTO MAXBEVEL MAINSPRING HOUSING
- About Us

Consumer Safety Instruction Guide for 1911 AUTO MAXBEVEL MAINSPRING HOUSING

Introduction

Thank you for choosing the 1911 AUTO MAXBEVEL MAINSPRING HOUSING by Stan Chen Customs. This product is designed to enhance the performance of your 1911 pistol while ensuring safety during use. Please read this safety instruction guide carefully to understand how to use, install, and dispose of the product safely.

General Safety Guidelines

- Ensure safe handling of the product at all times.
- Follow all instructions provided in this guide to avoid potential hazards.
- Use the product only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage.
- Report any unsafe conditions or incidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always handle the firearm in a safe manner, treating it as if it is loaded.
- Ensure that the firearm is unloaded before installing or modifying any components.
- Use protective eyewear when working on or installing the mainspring housing.
- Do not attempt to install the mainspring housing if you are not a qualified gunsmith.
- Ensure that all tools used for installation are in good condition and appropriate for the task.
- Be aware of your surroundings and ensure that no one is in the vicinity when handling the firearm.
- Avoid using excessive force during installation to prevent damage to the product or firearm.

Instructions for Installation and Usage

• Preparation:

- Gather all necessary tools for installation, including screwdrivers and a fitting block.
- Ensure that you are working in a clean, welllit area.

• Installation Steps:

1. Ensure the firearm is completely unloaded.
2. Remove the existing mainspring housing from the firearm.
3. Align the 1911 AUTO MAXBEVEL MAINSPRING HOUSING with the frame of the firearm.
4. Use the Proprietary BevelBlock™ fitting block to ensure a snug fit.
5. Make one simple machine cut for installation before final shaping.
6. If desired, shape the rear bevel to your preferred profile.
7. Secure the mainspring housing in place according to the manufacturer's instructions.

• Usage:

- After installation, test the fit and functionality of the mainspring housing.
- Practice safe shooting techniques and ensure proper grip on the firearm.
- Regularly check the mainspring housing for any signs of wear or damage during use.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- If the product is damaged or no longer functional, do not attempt to repair it.
- Consider recycling materials where possible to minimize environmental impact.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please refer to the appropriate EU contact point or customer support resources associated with this product.

By following these guidelines, you can ensure the safe and effective use of the 1911 AUTO MAXBEVEL MAINSPRING HOUSING. Thank you for prioritizing safety and responsible use.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk