

TOP PUNCHES LYMAN/RCBS STYLE - SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249

[Reloading](#) > [Bullet Casting](#) > [Top Punches](#)

Straight shank type top punches designed to fit the Lyman and RCBS Lubrisizers and SAEKO bullets.



Attributes

- Name: [SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249](#)
- Manufacturer: [SAEKO](#)
- Product no.: 100020312
- Mfr. No.: 46500
- Delivery weight: 0.068kg
- Shipping height: 8mm
- Shipping width: 76mm
- Shipping length: 103mm
- UPC: 611760465000

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for TOP PUNCHES LYMAN/RCBS STYLE SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249
- About Us

Safety Instruction Guide for TOP PUNCHES

LYMAN/RCBS STYLE SAEKO TOP PUNCHES

LYMAN/RCBS TYPE #2249

Introduction

Thank you for choosing the TOP PUNCHES LYMAN/RCBS STYLE SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249. This guide provides essential safety information and instructions to ensure the safe and effective use of this product. Please read this guide carefully before using the product.

General Safety Guidelines

- Always use the product in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of damage or wear before use.
- If you encounter any issues or concerns while using the product, discontinue use immediately and seek assistance.

Specific Safety Precautions for Use

- Ensure that the top punches are compatible with your Lyman or RCBS Lubrisizer and SAEKO bullets.
- Avoid using excessive force when inserting or removing the top punches to prevent damage.
- Wear safety goggles and gloves when handling and using the product to protect against potential injuries.
- Do not modify the product in any way. Alterations can lead to unsafe conditions and void warranties.

Instructions for Installation and Usage

1. Installation:

- Ensure that the Lyman or RCBS Lubrisizer is turned off and unplugged before installation.
- Select the appropriate top punch for your SAEKO bullet type.
- Align the straight shank of the top punch with the opening of the Lubrisizer.
- Gently insert the top punch until it is securely in place.

2. Usage:

- Turn on the Lubrisizer and follow the manufacturer's instructions for operating the device.
- Monitor the operation closely to ensure the top punch is functioning correctly.
- After use, turn off and unplug the Lubrisizer before removing the top punch.
- Carefully pull the top punch out of the Lubrisizer, avoiding excessive force.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste if it is damaged or contains hazardous materials.
- Consider recycling options for metal components where applicable.

Contact Information for Further Support

For any safety inquiries or concerns regarding the TOP PUNCHES LYMAN/RCBS STYLE SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249, please refer to the manufacturer's contact point provided on the packaging or product documentation.

Conclusion

By following these safety instructions, you can ensure the safe and effective use of the TOP PUNCHES LYMAN/RCBS STYLE SAEKO TOP PUNCHES LYMAN/RCBS TYPE #2249. Always prioritize safety and adhere to the guidelines provided in this document. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk