

RMR SEALING PLATE FOR KE ARMS SLIDES

[Handgun Parts](#) > [Slide Parts](#) > [Slide Hardware](#) > [Slide Covers](#)

Helps keep your RMR sealed from moisture & environmental conditions. Sits between the slide and the RMR. Stainless steel construction and made in the USA.



Attributes

- Name: [RMR SEALING PLATE FOR KE ARMS SLIDES](#)
- Manufacturer: [KE ARMS](#)
- Product no.: 100023142
- Mfr. No.: 1-50-25-018
- Model: 27,31,33,17,22,40,34,19,26,32,23
- Weapon type: Glock
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 51mm
- Shipping length: 89mm

Item details

Made in USA

Table of Contents

- Startpage
- RMR Sealing Plate Safety Instruction Guide
- About Us

RMR Sealing Plate Safety Instruction Guide

Introduction

Thank you for choosing the RMR Sealing Plate for KE Arms Slides. This product is designed to help keep your RMR sealed from moisture and environmental conditions. It is essential to follow safety guidelines to ensure safe use and maintain the integrity of your equipment.

General Safety Guidelines

- Ensure that the RMR Sealing Plate is compatible with your specific model of KE Arms slide. This product is suitable for Glock models 17, 19, 22, 23, 26, 27, 31, 32, 33, and 34.
- Always inspect the sealing plate for any damage before installation. Do not use if damaged.
- Keep the sealing plate and all related components out of reach of children and vulnerable individuals.
- Follow all local laws and regulations regarding the use of firearm accessories.

Specific Safety Precautions for Use

- Do not expose the RMR Sealing Plate to extreme temperatures or harsh chemicals, as this may compromise its integrity.
- Ensure that the sealing plate is installed correctly to prevent moisture ingress.
- Regularly check the sealing plate for wear and replace it if necessary.
- If you notice any signs of rust or corrosion on the stainless steel construction, discontinue use and seek replacement.

Instructions for Installation and Usage

1. Preparation:

- Ensure that the firearm is unloaded and pointed in a safe direction before beginning installation.
- Gather all necessary tools for installation.

2. Installation Steps:

- Remove the existing RMR from the slide.
- Clean the slide surface thoroughly to ensure a proper seal.
- Position the RMR Sealing Plate between the slide and the RMR.
- Align the holes of the RMR with the holes of the sealing plate and slide.
- Securely fasten the RMR back onto the slide using the appropriate screws.

3. PostInstallation:

- Once installed, check that the RMR is firmly attached and the sealing plate is properly seated.
- Test the functionality of the RMR to ensure it operates correctly.

Disposal Instructions

- Dispose of the RMR Sealing Plate in accordance with local regulations for metal waste.
- Do not dispose of the product in regular household waste. Check for recycling options in your area.

Contact Information for Further Support

For safety inquiries or to report unsafe products, please refer to your local EU contact point or the EU's Safety Gate platform for updates on recalls and product safety information.

By following these guidelines, you can ensure the safe use of the RMR Sealing Plate and maintain the performance of your equipment. Thank you for your attention to safety, and enjoy your product.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk