

"VICTORY" TRIGGER FOR RUGER® MKIV - TANDEM CROSS

"VICTORY" TRIGGER FOR RUGER MKIV - SILVER

[Handgun Parts](#) > [Trigger Group Parts](#) > [Trigger Parts](#) > [Triggers](#)

Drop-In Upgrade For A Straight, Light Trigger Pull

The Tandemkross Victory Trigger for Ruger® MkIV™ is a lightweight, skeletonized, flat-faced trigger that allows the shooter to pull straight back and instantly know if you're pulling too far to the left or right. With its flat faced design, the Tandemkross Victory Trigger encourages shooters to place their finger lower on the trigger, increasing leverage and letting shooters take advantage of lower trigger pull weights.

- Flat faced for better control and feel
- Adjustable for pre-travel and over-travel
- Fits Ruger® MkIV™ Target/Hunter/Competition/Tactical/Standard
- Will NOT fit MkIV™ 22/45
- Aluminum trigger available in black or silver

The Tandemkross Victory Trigger comes with pre- and post-travel adjustment screws to allow each shooter to customize their trigger pull. Textured trigger face offers a no-slip grip in any condition.



Attributes

- Name: [TANDEM CROSS "VICTORY" TRIGGER FOR RUGER MKIV - SILVER](#)
- Manufacturer: [TANDEM CROSS](#)
- Product no.: 100023852
- Mfr. No.: TK24N0172SLV1
- Finish: Silver
- Weapon type: Ruger
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 76mm
- Shipping length: 108mm
- UPC: 769498484876

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- Safety Instruction Guide for the Tandemkross Victory Trigger for Ruger® MkIV™
- About Us

Safety Instruction Guide for the Tandemkross Victory Trigger for Ruger® MkIV™

Introduction

Thank you for choosing the Tandemkross Victory Trigger for your Ruger® MkIV™ firearm. This guide is designed to provide you with essential safety information, usage instructions, and contact details for support. Please read this guide thoroughly to ensure safe and effective use of your product.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Ensure the firearm is pointed in a safe direction at all times.
- Store the trigger and any firearm securely and out of reach of children.
- Be aware of your surroundings and make sure there is a safe backstop for your shooting activities.
- Report any unsafe products or accidents to the appropriate authorities.
- Regularly check for updates on product recalls via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Age Restrictions:** This product is intended for use by individuals 18 years of age and older. Keep out of reach of children.
- **Installation:** Ensure the firearm is unloaded before installing the trigger. Follow the installation instructions carefully to avoid improper setup.
- **Adjustment:** Make adjustments to pretravel and overtravel screws only when the firearm is unloaded and pointed in a safe direction.
- **Testing:** After installation, test the trigger function in a safe environment before using the firearm in a live shooting scenario.
- **Maintenance:** Regularly inspect the trigger for wear or damage. If any issues are found, discontinue use and consult a qualified gunsmith.

Instructions for Installation and Usage

1. **Unloading the Firearm:** Before beginning installation, ensure that the Ruger® MkIV™ is completely unloaded. Remove the magazine and check the chamber.
2. **Removing the Old Trigger:** Follow the manufacturer's instructions to safely remove the existing trigger from the firearm.
3. **Installing the Victory Trigger:**
 - Align the Tandemkross Victory Trigger with the trigger housing.
 - Securely fasten the trigger in place according to the manufacturer's guidelines.
4. **Adjusting the Trigger:**
 - Use the provided adjustment screws to set pretravel and overtravel to your preference. Make small adjustments and test the trigger pull after each change.
5. **Testing the Trigger:**
 - With the firearm still unloaded, pull the trigger multiple times to ensure it functions correctly. Check for any abnormal resistance or failure to reset.
6. **Final Check:** Once satisfied with the trigger function, perform a final inspection to ensure all components are securely in place.

Disposal Instructions

- Dispose of any packaging materials in accordance with local regulations.
- If the trigger becomes damaged beyond repair, consult local waste management guidelines for the disposal of firearm components.
- Do not throw away in regular household waste. Seek out designated hazardous waste facilities if necessary.

Contact Information for Further Support

For additional support or inquiries regarding the Tandemkross Victory Trigger, please refer to the official Tandemkross website or customer service channels. Ensure you have your product details handy for the most efficient assistance.

By following these guidelines, you can help ensure your safety and the safety of those around you while using the Tandemkross Victory Trigger for your Ruger® MkIV™ firearm. Thank you for your attention to these important safety instructions.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk