

# AR-15 RIFLE BUFFER SPRING - LUTH-AR AR-15 RIFLE BUFFER SPRING

[Rifle Parts](#) > [Receiver Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

Luth-AR Factory replacement 223 Rifle Buffer Spring. Fits standard AR-15 rifles.



## Attributes

- Name: [LUTH-AR AR-15 RIFLE BUFFER SPRING](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028015
- Mfr. No.: BS-10B
- Weapon type: AR-15
- Delivery weight: 0.136kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 356mm
- UPC: 859819007157

## Item details

Made in USA

# Table of Contents

- Startpage
- AR15 Rifle Buffer Spring Safety Instructions
- About Us

# AR15 Rifle Buffer Spring Safety Instructions

## Introduction

Thank you for choosing the LuthAR AR15 Rifle Buffer Spring. This guide provides essential safety instructions to ensure the safe use and handling of this product. Please read this manual carefully before installation and use.

## General Safety Guidelines

- Always handle firearms with care and in accordance with local laws and regulations.
- Ensure that the firearm is unloaded before performing any installation or maintenance.
- Store the buffer spring in a secure location away from children and unauthorized users.
- Regularly inspect the buffer spring for any signs of wear or damage.
- Report any unsafe products or accidents to the relevant authorities.

## Specific Safety Precautions for Use

- This buffer spring is designed specifically for standard AR15 rifles. Do not use it with other firearm models.
- Ensure that all components of your firearm are compatible before installation.
- Use protective eyewear when handling or installing the buffer spring.
- Avoid using excessive force during installation to prevent damage to the spring or firearm.
- If you experience any issues during installation or operation, cease use immediately and consult a qualified gunsmith.

## Instructions for Installation and Usage

### 1. Preparation

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools: a punch tool and a hammer.

### 2. Removal of Old Buffer Spring

- Disassemble the rifle according to the manufacturer's instructions.
- Locate and remove the old buffer spring from the buffer tube.

### 3. Installation of New Buffer Spring

- Insert the new LuthAR buffer spring into the buffer tube.
- Ensure it is seated properly and is not pinched or misaligned.

### 4. Reassembly

- Reassemble the rifle according to the manufacturer's instructions.
- Perform a function check to ensure the firearm operates correctly.

### 5. Usage

- Always follow safe shooting practices when using your AR15 rifle.
- Regularly check the buffer spring for proper function and signs of wear.

## **Disposal Instructions**

- Dispose of the old buffer spring in accordance with local regulations.
- Do not dispose of any firearm components in regular household waste.
- Contact local waste management authorities for proper disposal methods.

## **Contact Information for Further Support**

For any questions or concerns regarding the LuthAR AR15 Rifle Buffer Spring, please contact your local dealer or refer to the manufacturer's website for additional support and resources.

Thank you for prioritizing safety and compliance with these guidelines. Your responsible use of this product contributes to a safer environment for all.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)