

AR-15 DISCONNECTOR - LUTH-AR AR-15 DISCONNECTOR

[Rifle Parts](#) > [Triggers Parts](#) > [Disconnecter Parts](#) > [Disconnectors](#)

Luth-AR factory replacement disconnector. Fits standard AR-15 rifles.



Attributes

- Name: [LUTH-AR AR-15 DISCONNECTOR](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028037
- Mfr. No.: LR19
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859819007461

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- Safety Instruction Guide for LuthAR AR15 Disconnector
- About Us

Safety Instruction Guide for LuthAR AR15 Disconnector

Introduction

Thank you for choosing the LuthAR AR15 Disconnector. This guide provides essential safety instructions and guidelines to ensure the safe use and installation of your disconnector. It is important to read and understand this document before using the product.

General Safety Guidelines

- Always handle firearms and firearm components with care and respect.
- Ensure you are in a safe environment when handling or installing the disconnector.
- Follow all local laws and regulations regarding firearm parts and modifications.
- Keep the disconnector and all firearm components out of reach of children and unauthorized users.
- Regularly inspect the disconnector for signs of wear or damage before each use.
- If you notice any defects or issues, do not use the disconnector and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Ensure that the firearm is unloaded before installing or replacing the disconnector.
- Use only compatible parts with your AR15 rifle to avoid malfunctions.
- Do not attempt to modify the disconnector or any other firearm component.
- Always wear appropriate safety gear, including eye protection, when working with firearms.
- Be aware of your surroundings and ensure that no one is in the vicinity when handling the firearm.

Instructions for Installation and Usage

1. Preparation

- Ensure you have the necessary tools for installation (e.g., punch tool, hammer).
- Work in a welllit and clean area.

2. Installation Steps

- Make sure the firearm is completely unloaded.
- Remove the upper and lower receivers of the AR15.
- Locate the existing disconnector in the lower receiver.
- Carefully remove the old disconnector using the punch tool.
- Align the new LuthAR disconnector in the same position as the old one.
- Gently tap the disconnector into place with the hammer, ensuring it is secure.
- Reassemble the lower and upper receivers of the firearm.

3. PostInstallation Check

- After installation, conduct a function check to ensure the disconnector operates correctly.
- Test the trigger mechanism to confirm proper engagement and release.

Disposal Instructions

- Dispose of any old or damaged disconnectors and components in accordance with local regulations.
- Do not throw firearm parts in regular trash; instead, check for local hazardous waste disposal options.

Contact Information for Further Support

For safety inquiries or additional support, please refer to the manufacturer's contact information provided with your product documentation or visit the manufacturer's website.

Conclusion

By following these safety instructions and guidelines, you can ensure a safe and effective experience with your LuthAR AR15 Disconnector. Always prioritize safety and compliance with local laws when handling firearm components. Thank you for your attention to these important safety measures.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk