

M16 DISCONNECTOR - LUTH-AR M16 DISCONNECTOR

[Rifle Parts](#) > [Triggers Parts](#) > [Disconnecter Parts](#) > [Disconnectors](#)

Luth-AR factory replacement disconnector. Fits standard M16 AR-15 rifles.



Attributes

- Name: [LUTH-AR M16 DISCONNECTOR](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028038
- Mfr. No.:
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859819007478

Item details

Made in USA

US export classification: I(h)(2)

Table of Contents

- Startpage
- M16 Disconnector Safety Instruction Guide
- About Us

M16 Disconnector Safety Instruction Guide

Introduction

Thank you for choosing the LuthAR M16 Disconnector. This product is designed as a factory replacement disconnector for standard M16 AR15 rifles. It is essential to follow the safety guidelines and instructions provided in this document to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the disconnector is installed by a qualified gunsmith or experienced individual familiar with AR15 rifle components.
- Always handle firearms with care and follow standard firearm safety protocols.
- Keep the disconnector and all firearm components out of reach of children and unauthorized persons.
- Regularly inspect the disconnector for wear or damage. Replace if any issues are found.
- Report any unsafe conditions or accidents involving the disconnector to the relevant authorities.
- Stay informed about product recalls and safety updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Before installation, ensure the firearm is completely unloaded and the chamber is clear.
- Do not modify the disconnector or any other firearm component. Modifications can lead to malfunction or unsafe operation.
- Always wear appropriate eye protection when handling firearms.
- Be aware of your surroundings when using firearms. Ensure a safe shooting environment.
- If you experience any malfunctions during use, cease operation immediately and consult a qualified professional.

Instructions for Installation and Usage

Installation Instructions

1. **Preparation:** Gather necessary tools and ensure you have a clean and welllit workspace.
2. **Unload Firearm:** Confirm that the firearm is unloaded and the chamber is clear.
3. **Remove the Old Disconnector:**
 - Disassemble the lower receiver of your AR15 according to the manufacturer's instructions.
 - Carefully remove the old disconnector from its housing.
4. **Install the New Disconnector:**
 - Place the LuthAR M16 Disconnector into the housing, ensuring it is seated correctly.
 - Reassemble the lower receiver, following the manufacturer's guidelines.
5. **Function Check:**
 - After installation, perform a function check to ensure proper operation of the disconnector.
 - Make sure the firearm operates correctly before taking it to the range.

Usage Instructions

- Always follow standard firearm handling procedures.
- Regularly check the disconnector during routine maintenance to ensure it is functioning correctly.
- If any issues arise during use, consult a qualified gunsmith immediately.

Disposal Instructions

- Dispose of the disconnector in accordance with local regulations.
- Do not dispose of the disconnector in regular household waste. Check with local authorities for proper

disposal methods for firearm components.

Contact Information for Further Support

For any safety inquiries or support related to the LuthAR M16 Disconnector, please refer to the manufacturer's website or customer service resources.

By following these safety instructions and guidelines, you can ensure the safe and effective use of your LuthAR M16 Disconnector. Thank you for prioritizing safety in your firearm practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk