

AR-15 AUTO SEAR PIN - LUTH-AR AR-15 AUTO SEAR PIN

[Rifle Parts](#) > [Triggers Parts](#) > [Sear Parts](#) > [Sear Pins](#)

Luth-AR factory replacement Auto Sear Pin. Fits standard M16 AR-15 rifles.



Attributes

- Name: [LUTH-AR AR-15 AUTO SEAR PIN](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028043
- Mfr. No.: LRAS2
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859819007607

Item details

Made in USA

Table of Contents

- Startpage
- AR15 AUTO SEAR PIN Safety Instructions
- About Us

AR15 AUTO SEAR PIN Safety Instructions

Introduction

Thank you for purchasing the AR15 AUTO SEAR PIN from LuthAR. This guide provides essential safety instructions to ensure the safe use and installation of this product. Please read this document carefully before use.

General Safety Guidelines

- Ensure that you are familiar with local laws and regulations regarding firearm modifications and accessories.
- Always handle firearms responsibly and in accordance with established safety practices.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for wear and damage before installation and use.
- If you experience any issues or concerns with the product, discontinue use immediately and seek professional assistance.

Specific Safety Precautions for Use

- Use the AR15 AUTO SEAR PIN only with standard M16 AR15 rifles as specified.
- Ensure that the firearm is unloaded and pointed in a safe direction before installation.
- Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, during installation.
- Do not modify the AR15 AUTO SEAR PIN or attempt to alter its design.
- Always follow the manufacturer's instructions for proper use and maintenance.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is completely unloaded.
- Gather necessary tools for installation, including a punch tool and hammer.

2. Installation Steps

- Remove the existing sear pin from the firearm using the punch tool.
- Align the AR15 AUTO SEAR PIN with the sear housing.
- Gently tap the pin into place using the hammer, ensuring it is securely fitted.
- Doublecheck that the pin is properly installed and that there are no obstructions.

3. PostInstallation Check

- Conduct a function check of the firearm to ensure proper operation.
- Verify that the sear mechanism operates smoothly without any binding or interference.

4. Usage

- Only use the firearm in a controlled environment, such as a shooting range.
- Follow all safety and operational guidelines provided for the specific firearm model.

Disposal Instructions

- Dispose of the AR15 AUTO SEAR PIN responsibly and in accordance with local regulations.

- If the product is damaged or no longer needed, contact local waste management authorities for proper disposal methods.

Contact Information for Further Support

For safety inquiries or further assistance, please refer to the manufacturer's official website or customer support channels.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your AR15 AUTO SEAR PIN. Always prioritize safety and compliance with local laws regarding firearm accessories.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk