

AR-15 5.56MM WELD SPRING - LUTH-AR AR-15 5.56MM WELD SPRING

[Rifle Parts](#) > [Barrel Parts](#) > [Rifle Barrel Hardware](#) > [Barrel Springs](#)

The Luth-AR factory replacement .223/5.56 Weld Spring. Fits standard AR-15 rifles.



Attributes

- Name: [LUTH-AR AR-15 5.56MM WELD SPRING](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028049
- Mfr. No.: BL08
- Colour: Black
- Material: Steel
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859819007713

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for LuthAR AR15 5.56MM Weld Spring
- About Us

Safety Instruction Guide for LuthAR AR15 5.56MM Weld Spring

Introduction

Thank you for choosing the LuthAR AR15 5.56MM Weld Spring. This product is designed for use in standard AR15 rifles. To ensure your safety and the proper functioning of your firearm, please read and follow the safety instructions and guidelines outlined in this document.

General Safety Guidelines

- Always treat firearms as if they are loaded.
- Ensure that the firearm is pointed in a safe direction at all times.
- Keep your finger off the trigger until you are ready to shoot.
- Store firearms and ammunition securely, out of reach of unauthorized persons, especially children.
- Regularly inspect your firearm and its components for wear and damage.
- Only use parts and accessories that are compatible with your firearm.
- Follow all local, state, and national laws regarding firearm ownership and usage.

Specific Safety Precautions for Use

- Ensure that the AR15 is unloaded before installing or replacing the Weld Spring.
- Always wear appropriate eye and ear protection when handling firearms.
- Be aware of your surroundings and ensure that no one is in the line of fire when using the firearm.
- If you experience any malfunctions or unusual behavior from your firearm, cease use immediately and consult a qualified gunsmith.
- This product is not intended for use by individuals under the age of 18 without adult supervision.

Instructions for Installation and Usage

1. Preparation:

- Ensure the AR15 rifle is completely unloaded.
- Gather necessary tools for installation, including a punch tool and a hammer.

2. Installation Steps:

- Remove the existing Weld Spring from the rifle.
- Align the new LuthAR Weld Spring with the appropriate mounting points.
- Use the punch tool to carefully install the new Weld Spring, ensuring it is seated properly.
- Verify that the spring is securely in place and functions correctly.

3. PostInstallation Check:

- After installation, check the functionality of the firearm by performing a dry fire test (without ammunition) to ensure the spring operates smoothly.
- Inspect for any signs of improper installation or misalignment.

4. Usage:

- When using the firearm, ensure that all safety protocols are followed.
- Regularly inspect the Weld Spring for wear and tear, and replace as necessary.

Disposal Instructions

- Dispose of the Weld Spring in accordance with local regulations regarding metal waste.
- Do not dispose of the Weld Spring in regular household waste.
- If you are unsure about disposal methods, consult local waste management authorities for guidance.

Contact Information for Further Support

For any inquiries or concerns regarding the LuthAR AR15 5.56MM Weld Spring, please refer to the manufacturer's contact information provided with the product packaging or on the official website.

By following these safety instructions and guidelines, you can ensure the safe use of your LuthAR AR15 5.56MM Weld Spring and contribute to a safer shooting environment. Always prioritize safety and responsible firearm handling.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk