

AR-15 EJECTION HINGE PIN SNAP RING - LUTH-AR EJECTION HINGE PIN SNAP RING

[Home](#)

Luth-AR factory replacement Ejection Hinge Pin Snap Ring. Fits standard AR-15 rifles.



Attributes

- Name: [LUTH-AR EJECTION HINGE PIN SNAP RING](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 100028056
- Mfr. No.: UR-02
- Weapon type: AR-15
- Delivery weight: 0.001kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859819007812

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instructions for LuthAR Ejection Hinge Pin Snap Ring
- About Us

Safety Instructions for LuthAR Ejection Hinge Pin Snap Ring

Introduction

Thank you for choosing the LuthAR Ejection Hinge Pin Snap Ring. This product is designed as a factory replacement part for standard AR15 rifles. It is essential to follow the safety guidelines and instructions provided in this manual to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the product is compatible with your specific AR15 model before use.
- Always handle firearms and firearm components with care and respect.
- Keep the product and all firearm components out of reach of children and unauthorized users.
- Regularly inspect the Ejection Hinge Pin Snap Ring for wear or damage before each use.
- If you notice any defects or irregularities, do not use the product and contact a qualified gunsmith or the manufacturer for further assistance.
- Follow all local laws and regulations regarding the use and modification of firearms.

Specific Safety Precautions for Use

- Always wear safety glasses when handling firearms to protect your eyes from debris.
- Ensure that the firearm is unloaded and pointed in a safe direction before installing or removing the Ejection Hinge Pin Snap Ring.
- Do not attempt to modify or alter the Ejection Hinge Pin Snap Ring in any way.
- Use only manufacturer recommended tools and methods for installation.
- Be cautious of sharp edges when handling the Ejection Hinge Pin Snap Ring.

Instructions for Installation and Usage

1. Preparation

- Ensure that the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools, including a punch tool and a hammer.

2. Installation Steps

- Remove the existing Ejection Hinge Pin Snap Ring if applicable.
- Align the new Ejection Hinge Pin Snap Ring with the hinge pin hole.
- Use the punch tool to gently press the snap ring into place, ensuring it is seated securely.
- Doublecheck that the snap ring is fully seated and not protruding from the hinge pin hole.

3. PostInstallation Check

- Verify that the Ejection Hinge Pin Snap Ring is properly installed by gently tugging on it.
- Ensure that the hinge pin operates smoothly without obstruction.

Disposal Instructions

- Dispose of the Ejection Hinge Pin Snap Ring responsibly.
- Follow local regulations for the disposal of firearm components.
- If the product is damaged or no longer needed, consider recycling it where possible.

Contact Information for Further Support

For any safety inquiries or concerns regarding the LuthAR Ejection Hinge Pin Snap Ring, please refer to the manufacturer's website or contact your local authorized dealer for assistance.

Conclusion

By following these safety instructions, you can ensure the safe and effective use of the LuthAR Ejection Hinge Pin Snap Ring. Always prioritize safety and compliance with local laws when handling firearms and components. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk