

# LOAD-MASTER PROGRESSIVE PRESS SHELL PLATES - LEE PRECISION #19L LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Lee quick change shell plates for the Load-Master Press.



## Attributes

- Name: [LEE PRECISION #19L LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 100032108
- Mfr. No.: 90068
- Cartridge: 10 mm Auto
- Style: Press Type
- Delivery weight: 0.159kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 83mm
- UPC: 734307900687

## Item details

Made in USA

# Table of Contents

- Startpage
- LOADMASTER PROGRESSIVE PRESS SHELL PLATES LEE PRECISION #19L Safety Instruction Guide
- About Us

# LOADMASTER PROGRESSIVE PRESS SHELL PLATES LEE PRECISION #19L Safety Instruction Guide

## Introduction

Thank you for choosing the LOADMASTER PROGRESSIVE PRESS SHELL PLATES by Lee Precision. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your shell plates. Please read this document carefully before using the product.

## General Safety Guidelines

- Ensure that you are familiar with the operation of your LoadMaster Press before using the shell plates.
- Always use the shell plates in accordance with the manufacturer's instructions.
- Keep the working area clean and free of clutter to prevent accidents.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when operating the press.
- Store the shell plates in a safe and dry location when not in use.
- Regularly inspect the shell plates for any signs of wear or damage before each use.
- Do not use the shell plates for any purpose other than intended.

## Specific Safety Precautions for Use

- Do not exceed the recommended cartridge specifications for the shell plates.
- Ensure that the shell plates are securely attached to the LoadMaster Press before operation.
- Avoid placing hands or fingers near moving parts during operation.
- Keep children and pets away from the working area.
- If you notice any unusual noises or malfunctions during use, stop immediately and inspect the equipment.
- In case of any injuries or accidents, seek medical attention promptly.

## Instructions for Installation and Usage

### 1. Installation

- Ensure that the LoadMaster Press is turned off and unplugged before installation.
- Remove any existing shell plate from the press.
- Align the new shell plate with the mounting points on the press.
- Secure the shell plate in place according to the manufacturer's instructions.
- Doublecheck that the shell plate is firmly attached before proceeding.

### 2. Usage

- Load the appropriate cartridges into the shell plate.
- Follow the instructions for operating the LoadMaster Press as outlined in the press's user manual.
- Monitor the operation closely and ensure that all safety precautions are being followed.
- After use, remove any remaining cartridges and clean the shell plate as necessary.

## Disposal Instructions

- Dispose of any damaged or worn shell plates according to local regulations.
- Do not dispose of shell plates in regular household waste.

- Check with your local waste management authority for proper disposal methods.

## **Contact Information for Further Support**

For safety inquiries or concerns, please refer to the manufacturer's website or customer service contact.

By following these safety guidelines and instructions, you can ensure a safe and efficient experience with your LOADMASTER PROGRESSIVE PRESS SHELL PLATES. Thank you for prioritizing safety in your reloading activities.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)