

LOAD-MASTER PROGRESSIVE PRESS SHELL PLATES - LEE PRECISION #1S LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Lee quick change shell plates for the Load-Master Press.



Attributes

- Name: [LEE PRECISION #1S LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 100032110
- Mfr. No.: 90907
- Cartridge: 357 Magnum,38 Special
- Style: Press Type
- Delivery weight: 0.159kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 76mm
- UPC: 734307909079

Item details

Made in USA

Table of Contents

- Startpage
- LOADMASTER PROGRESSIVE PRESS SHELL PLATES SAFETY INSTRUCTIONS
- About Us

LOADMASTER PROGRESSIVE PRESS SHELL PLATES SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the LOADMASTER PROGRESSIVE PRESS SHELL PLATES by Lee Precision. This guide provides essential safety instructions and usage guidelines to ensure a safe and effective experience with your shell plates. Please read this document carefully before use.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified by the manufacturer.
- Always inspect the shell plates before use for any signs of damage or wear.
- Keep the product out of reach of children and vulnerable individuals.
- Follow all local regulations and guidelines regarding the use of reloading equipment.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including safety glasses and gloves, when using the LOADMASTER PRESS and shell plates.
- Ensure that the work area is clean and free from clutter to prevent accidents.
- Do not exceed the recommended cartridge specifications for the shell plates.
- Avoid using damaged or worn shell plates, as they may pose a safety risk.
- Store the shell plates in a dry, cool place to prevent deterioration.

Instructions for Installation and Usage

1. Installation:

- Ensure the LOADMASTER PRESS is turned off and unplugged before installation.
- Remove any existing shell plates from the press.
- Align the new shell plate with the press mounting area.
- Secure the shell plate in place according to the manufacturer's instructions.

2. Usage:

- Confirm that the shell plate is properly installed and secure before use.
- Load the appropriate cartridge into the shell plate, ensuring it matches the specifications for the shell plate model.
- Operate the LOADMASTER PRESS according to the manufacturer's guidelines, paying attention to the reloading process.
- After use, clean the shell plates to maintain their condition and performance.

Disposal Instructions

- Dispose of any damaged or unusable shell plates in accordance with local waste disposal regulations.
- Do not incinerate or expose the shell plates to extreme heat.
- Ensure that any packaging materials are recycled or disposed of responsibly.

Contact Information for Further Support

For any questions or concerns regarding the LOADMASTER PROGRESSIVE PRESS SHELL PLATES, please refer to the manufacturer's official website or customer service resources for assistance.

By following these safety instructions, you can ensure a safe and effective experience with your LOADMASTER PROGRESSIVE PRESS SHELL PLATES. Thank you for your attention to safety and compliance.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk