

LOAD-MASTER PROGRESSIVE PRESS SHELL PLATES - LEE PRECISION #2L LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Lee quick change shell plates for the Load-Master Press.



Attributes

- Name: [LEE PRECISION #2L LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 100032112
- Mfr. No.: 90908
- Cartridge: 30-06 Family,45 Auto (ACP),308 Winchester,22-250 Remington
- Style: Press Type
- Delivery weight: 0.159kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 76mm
- UPC: 734307909086

Item details

Made in USA

Table of Contents

- Startpage
- LOADMASTER PROGRESSIVE PRESS SHELL PLATES SAFETY INSTRUCTIONS
- About Us

LOADMASTER PROGRESSIVE PRESS SHELL PLATES SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the LOADMASTER PROGRESSIVE PRESS SHELL PLATES by Lee Precision. This guide provides essential safety instructions and recommendations for the safe use of the shell plates, ensuring a secure and efficient reloading experience. Please read this guide carefully before using the product.

General Safety Guidelines

- Ensure that the product is used in accordance with the manufacturer's instructions.
- Always inspect the shell plates for damage or wear before use.
- Keep the shell plates out of reach of children and vulnerable individuals.
- Use the shell plates only with compatible cartridges as specified.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Compatibility:** Only use the shell plates with the following cartridges:
 - 45 Auto (ACP)
 - 308 Winchester
 - 22250 Remington
 - 3006 Family
- **Personal Protective Equipment (PPE):** Always wear appropriate PPE, such as safety glasses and gloves, when reloading ammunition.
- **Work Area:** Ensure that your work area is clean, welllit, and free from distractions.
- **Handling:** Handle all components with care to avoid accidental discharge or damage.
- **Storage:** Store the shell plates in a dry, secure location when not in use.

Instructions for Installation and Usage

1. Installation:

- Ensure the LoadMaster Press is unplugged and in a safe state before installation.
- Remove any existing shell plates from the press.
- Align the new shell plate with the mounting area on the press.
- Secure the shell plate in place according to the manufacturer's instructions.

2. Usage:

- Verify that the shell plate is properly installed and securely fastened before use.
- Load the appropriate cartridge into the shell plate.
- Follow the reloading process as specified in the LoadMaster Press manual.
- Monitor the reloading process closely to ensure safety and efficiency.

Disposal Instructions

- Dispose of any damaged or worn shell plates according to local regulations regarding hazardous waste.
- Do not throw shell plates in regular household waste if they are damaged.

Contact Information for Further Support

For any inquiries or further assistance regarding the LOADMASTER PROGRESSIVE PRESS SHELL PLATES, please consult the manufacturer's website or customer support resources. Ensure you have the product details ready for efficient service.

Thank you for prioritizing safety while using the LOADMASTER PROGRESSIVE PRESS SHELL PLATES. Your adherence to these guidelines contributes to a safer reloading experience.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk