

LOAD-MASTER PROGRESSIVE PRESS SHELL PLATES - #6S LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Lee quick change shell plates for the Load-Master Press.



Attributes

- Name: [#6S LOAD-MASTER PROGRESSIVE PRESS SHELL PLATE](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 100032117
- Mfr. No.: 90912
- Cartridge: 25-20 Winchester,32-20 Winchester
- Style: Press Type
- Delivery weight: 0.159kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 76mm
- UPC: 734307909123

Item details

Made in USA

Table of Contents

- Startpage
- LOADMASTER PROGRESSIVE PRESS SHELL PLATES #6S Safety Instruction Guide
- About Us

LOADMASTER PROGRESSIVE PRESS SHELL PLATES #6S Safety Instruction Guide

Introduction

Thank you for choosing the LOADMASTER PROGRESSIVE PRESS SHELL PLATES #6S by Lee Precision. This guide is designed to provide you with essential safety instructions and guidelines to ensure safe and effective use of this product. Please read this document carefully before using the shell plates.

General Safety Guidelines

- Ensure all safety precautions are followed when using nonfood products.
- Always handle the shell plates with care to prevent injury.
- Check for any visible damage to the product before use.
- Keep the shell plates out of reach of children and vulnerable individuals.
- Regularly inspect the product for wear and tear, and replace if necessary.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always use the shell plates in accordance with the manufacturer's instructions.
- Wear appropriate personal protective equipment, such as safety glasses and gloves, when operating the LoadMaster Press.
- Ensure that the press is securely mounted and stable before use.
- Do not exceed the recommended load capacity of the press.
- Be aware of your surroundings and ensure that no one is in close proximity when operating the press.
- Do not modify the shell plates or the press in any way that may compromise safety.
- Follow all local regulations and guidelines regarding the use of reloading equipment.

Instructions for Installation and Usage

1. Unpack the Shell Plates:

- Carefully remove the shell plates from the packaging.
- Inspect for any damage or defects.

2. Install the Shell Plates:

- Ensure the LoadMaster Press is turned off and unplugged.
- Align the shell plate with the mounting area on the press.
- Securely fasten the shell plate according to the manufacturer's instructions.

3. Using the Shell Plates:

- Load the appropriate cartridge (2520 Winchester or 3220 Winchester) into the shell plate.
- Follow the operating instructions for the LoadMaster Press to ensure proper functioning.
- Monitor the reloading process closely for any irregularities.
- After use, ensure the press is turned off and unplugged.

4. Maintenance:

- Clean the shell plates regularly to prevent buildup of debris.
- Store the shell plates in a dry, safe location when not in use.

Disposal Instructions

- Dispose of any damaged or worn shell plates in accordance with local waste disposal regulations.
- Do not discard shell plates in regular household waste if they are deemed hazardous.

Contact Information for Further Support

For safety inquiries or further support, please refer to the manufacturer's contact information provided with your product packaging or on the manufacturer's website.

Thank you for adhering to these safety guidelines. Your careful use of the LOADMASTER PROGRESSIVE PRESS SHELL PLATES #6S will help ensure a safe and enjoyable reloading experience.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at