

COLLAR ADJUSTABLE GAS BLOCK - STRIKE INDUSTRIES COLLAR ADJUSTABLE GAS BLOCK

[Rifle Parts](#) > [Gas System Parts](#) > [Gas Blocks](#)

Remove the hassle but keep the functionality with Strike Industries' innovative adjustable gas block. Using 6 (5 pre-sized settings and 1 closed setting), easily return to the exact same level of gas flow for your direct impingement system.



Attributes

- Name: [STRIKE INDUSTRIES COLLAR ADJUSTABLE GAS BLOCK](#)
- Manufacturer: [STRIKE INDUSTRIES](#)
- Product no.: 100036908
- Mfr. No.: SI-AR-CAGB
- Inside Diameter: .750
- Style: Adjustable
- Weapon type: AR-15
- Delivery weight: 0.091kg
- Shipping height: 38mm
- Shipping width: 114mm
- Shipping length: 152mm
- UPC: 708747548518

Item details

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for the COLLAR ADJUSTABLE GAS BLOCK
- About Us

Safety Instruction Guide for the COLLAR ADJUSTABLE GAS BLOCK

Introduction

Thank you for choosing the Strike Industries Collar Adjustable Gas Block. This product is designed to enhance the functionality of your direct impingement system while ensuring safe use. Please read this safety instruction guide thoroughly to understand how to use, install, and dispose of the product properly.

General Safety Guidelines

- Ensure that the gas block is compatible with your AR15 model before installation.
- Always wear appropriate safety gear, including eye protection, when handling firearms and related components.
- Keep the gas block and all firearms out of reach of children and unauthorized individuals.
- Regularly inspect the gas block for any signs of wear or damage before use.
- If you experience any issues with the gas block, cease use immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Only use the gas block in accordance with the manufacturer's instructions.
- Do not exceed the recommended gas flow settings; this may lead to malfunctions or damage.
- Ensure that the gas block is securely installed before firing the firearm.
- Avoid using the gas block in wet or corrosive environments unless specifically designed for such conditions.
- Be aware of your surroundings and ensure a safe shooting environment when using your firearm.

Instructions for Installation and Usage

1. Installation Steps:

- Ensure the firearm is unloaded and in a safe condition before beginning installation.
- Remove the existing gas block from your AR15 using appropriate tools.
- Align the Strike Industries Collar Adjustable Gas Block with the gas tube and barrel.
- Secure the gas block in place according to the manufacturer's specifications.
- Adjust the gas flow settings to the desired level using the provided presized settings.

2. Usage Steps:

- After installation, conduct a function check to ensure proper operation.
- Fire a few rounds to verify that the gas block is functioning correctly.
- Make adjustments to the gas flow as needed based on performance and conditions.

Disposal Instructions

- Dispose of the gas block in accordance with local regulations regarding firearm components.
- If the gas block is damaged or no longer functional, consider recycling the materials where possible.
- Do not dispose of the gas block in regular household waste.

Contact Information for Further Support

For any safety inquiries or concerns regarding the Strike Industries Collar Adjustable Gas Block, please refer to

the contact information provided by the retailer or manufacturer. Always ensure that you reach out to a qualified professional for assistance.

Conclusion

By following these safety instructions and guidelines, you can ensure the safe and effective use of the Strike Industries Collar Adjustable Gas Block. Always prioritize safety and compliance with local laws and regulations when handling firearms and related accessories.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk