

GUIDE ROD ASSEMBLY FOR GLOCK® 19 - RIVAL ARMS GUIDE ROD ASSEMBLY FOR GLOCK® 19 GEN 4 STAINLESS STEEL

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Spring Guide Rods](#)

Experienced shooters realize plastic guide rods can chip, crack, or break resulting in feeding or ejection failures, flex can also contribute to accuracy problems. Rival Arms™ Guide Rod Assemblies address all of these issues and will provide you a lifetime of reliable service.



Attributes

- Name: [RIVAL ARMS GUIDE ROD ASSEMBLY FOR GLOCK® 19 GEN 4 STAINLESS STEEL](#)
- Manufacturer: [RIVAL ARMS](#)
- Product no.: 100038498
- Mfr. No.: RA-RA50G211S
- Model: 19,Gen 4
- Weapon type: Glock
- Delivery weight: 0.045kg
- Shipping height: 38mm
- Shipping width: 76mm
- Shipping length: 114mm
- UPC: 788130027110

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- GUIDE ROD ASSEMBLY FOR GLOCK® 19
- About Us

GUIDE ROD ASSEMBLY FOR GLOCK® 19

Introduction

Thank you for choosing the Rival Arms™ Guide Rod Assembly for your Glock® 19 Gen 4. This product is designed to enhance the performance of your firearm while ensuring safety and reliability. Please read this safety instruction guide carefully to understand how to use, install, and maintain your Guide Rod Assembly.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your firearm pointed in a safe direction at all times.
- Store your firearm securely and out of reach of children.
- Always wear appropriate eye and ear protection when using your firearm.
- Be aware of your surroundings and ensure a clear target before firing.
- Regularly inspect your Guide Rod Assembly for any signs of wear or damage.
- Follow all local laws and regulations regarding firearm use and ownership.

Specific Safety Precautions for Use

- Ensure that your Glock® 19 is unloaded before installing the Guide Rod Assembly.
- Do not attempt to modify or alter the Guide Rod Assembly in any way.
- Use only compatible parts and accessories designed for the Glock® 19 Gen 4.
- Do not use the firearm if the Guide Rod Assembly is damaged or improperly installed.
- Avoid using the firearm in extreme conditions that may affect the performance of the Guide Rod Assembly.

Instructions for Installation and Usage

1. Preparation

- Ensure your Glock® 19 is completely unloaded.
- Gather necessary tools: a punch tool and a small hammer (if required).

2. Installation

- Remove the slide from the frame of the Glock® 19.
- Take out the old guide rod assembly by pushing out the retaining pin with the punch tool.
- Insert the Rival Arms™ Guide Rod Assembly into the slide, ensuring it is seated properly.
- Reinstall the retaining pin to secure the guide rod in place.

3. Usage

- After installation, reattach the slide to the frame.
- Perform a function check to ensure that the guide rod is operating correctly.
- Store the firearm safely when not in use.

Disposal Instructions

- Dispose of any damaged or worn parts according to local regulations.
- Do not throw the Guide Rod Assembly in regular trash. Instead, take it to a local recycling facility that accepts metal components.

Contact Information for Further Support

For any questions or concerns regarding the Rival Arms™ Guide Rod Assembly, please refer to your retailer or manufacturer's website for further assistance.

By following these safety instructions, you can help ensure a safe and enjoyable shooting experience with your Glock® 19. Thank you for choosing Rival Arms™.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk