

1911 JEM BEAVERTAIL GRIP SAFETY - EGW JEM BEAVERTAIL GRIP SAFETY, BLUED, S70

[Handgun Parts](#) > [Safety Parts](#) > [Safeties](#)

An Oversized 1911 Beavertail Grip Safety Perfect for Final Fitting

Machined from a solid piece of barstock, the JEM 1911 Beavertail Grip Safety ships with slightly oversized dimensions in critical areas, enabling homebuilders and gunsmiths to achieve a perfect, custom fit on their 1911 pistol frame. The JEM 1911 Beavertail Grip Safety features a beavertail that's wider than the frame, allowing the part to be fit into the frame rather than the other way around. The overall length of the grip safety is longer at the bottom, and the angle is such that it allows the safety to adequately fill the gap in the pistol frame. Other features of the JEM 1911 Beavertail Grip Safety include a reamed pin hole that measures .158 inch, as well as a .250-inch radius. The enlarged contact pad on the grip safety ensures positive engagement. One note: this grip safety is designed specifically for high-cut frames and will need blending. The safety will fit all JEM frames, as well as 2011 High-Cap STI pistol frames



Attributes

- Name: [EGW JEM BEAVERTAIL GRIP SAFETY, BLUED, S70](#)
- Manufacturer: [EGW](#)
- Product no.: 100039479
- Mfr. No.: 10730
- Finish: Blued
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 841370101412

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for the 1911 JEM Beavertail Grip Safety](#)
- [About Us](#)

Safety Instruction Guide for the 1911 JEM Beavertail Grip Safety

Introduction

Thank you for choosing the 1911 JEM Beavertail Grip Safety. This product is designed to enhance the safety and performance of your 1911 pistol. Please read this safety instruction guide carefully to ensure safe usage and installation.

General Safety Guidelines

To ensure safe use of the 1911 JEM Beavertail Grip Safety, please follow these general safety guidelines:

- Always handle firearms with care and respect.
- Ensure that the firearm is unloaded before installing or modifying any parts.
- Use personal protective equipment (PPE) such as safety glasses and gloves during installation.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the grip safety for wear or damage.
- Report any unsafe conditions or product failures to the appropriate authorities.

Specific Safety Precautions for Use

When using the 1911 JEM Beavertail Grip Safety, please observe the following safety precautions:

- Ensure that the grip safety is properly installed and fitted to the firearm before use.
- Do not modify the grip safety beyond the manufacturer's specifications.
- Be aware that this grip safety is designed for highcut frames and may require blending for optimal fit.
- If you experience any issues with the grip safety, discontinue use and seek professional assistance.
- Always follow the manufacturer's instructions for your specific firearm model.

Instructions for Installation and Usage

Follow these steps for the proper installation and usage of the 1911 JEM Beavertail Grip Safety:

1. Preparation:

- Gather necessary tools including a punch set, a hammer, and a file.
- Ensure that the firearm is unloaded and pointed in a safe direction.

2. Removal of Old Safety:

- Carefully remove the existing grip safety from the firearm according to the manufacturer's instructions.
- Inspect the frame for any damage or wear.

3. Fitting the New Grip Safety:

- Align the JEM Beavertail Grip Safety with the frame.
- Check the fit; the beavertail should be wider than the frame, allowing for adjustment.
- Use a file to blend the grip safety into the frame if necessary.

4. Pin Hole Alignment:

- Ensure the reamed pin hole measures .158 inch for proper alignment.

- Insert the pin and check for secure engagement.

5. Final Checks:

- Ensure that the grip safety is functioning correctly by testing its engagement with the pistol frame.
- Make any final adjustments as needed.

6. Usage:

- Once installed, the grip safety should adequately fill the gap in the pistol frame.
- Always ensure that the grip safety is engaged when handling the firearm.

Disposal Instructions

When disposing of the 1911 JEM Beavertail Grip Safety, please follow these guidelines:

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- If the product is damaged or no longer usable, consider recycling materials where possible.

Contact Information for Further Support

For any questions or concerns regarding the 1911 JEM Beavertail Grip Safety, please refer to the manufacturer's contact information provided with your product.

By adhering to these safety instructions, you can ensure a safe and effective experience with your 1911 JEM Beavertail Grip Safety. Always prioritize safety and seek professional assistance if you are unsure about any procedures. Thank you for your attention to these important safety guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk