

# AR-15 EXTRACTOR ASSEMBLY - BROWNELLS BRN AR-15 BOLT EXTRACTOR ASSEMBLY, BLACK

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractors](#)

OEM AR-15/M16 replacement Extractor Assembly. Includes the extractor, extractor spring and extractor spring O-ring.



## Attributes

- Name: [BROWNELLS BRN AR-15 BOLT EXTRACTOR ASSEMBLY, BLACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 100040957
- Mfr. No.: AZT-M4-556ST079
- Weapon type: AR-15
- Delivery weight: 0.009kg
- Shipping height: 152mm
- Shipping width: 5mm
- Shipping length: 76mm
- UPC: 050806029620

## Item details

Made in USA

US export classification: 0A501.x

# Table of Contents

- Startpage
- AR15 Extractor Assembly Safety Instruction Guide
- About Us

# AR15 Extractor Assembly Safety Instruction Guide

## Introduction

Thank you for purchasing the AR15 Extractor Assembly from BROWNELLS. This guide provides essential safety instructions and information to ensure the safe use, installation, and disposal of the product. Please read this guide carefully before using the extractor assembly.

## General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in the product description.
- Always handle firearms and firearm components with care and in accordance with established safety practices.
- Keep the extractor assembly out of reach of children and unauthorized personnel.
- Regularly inspect the extractor assembly for any signs of wear or damage before use.
- Report any unsafe products or accidents to the relevant authorities.

## Specific Safety Precautions for Use

- Always wear safety glasses when handling or installing firearm components to protect your eyes from debris.
- Ensure that the firearm is unloaded and pointed in a safe direction before attempting to install or replace the extractor assembly.
- Use only OEM parts for replacements to ensure compatibility and safety.
- Follow the manufacturer's instructions for installation and usage to avoid potential hazards.
- If you are unsure about the installation process, seek assistance from a qualified gunsmith.

## Instructions for Installation and Usage

### 1. Preparation

- Gather all necessary tools and materials, including the extractor assembly, extractor spring, and O-ring.
- Ensure the firearm is unloaded and in a safe condition.

### 2. Installation Steps

- Remove the bolt carrier group from the firearm.
- Locate the extractor on the bolt assembly.
- Carefully remove the existing extractor, spring, and O-ring from the bolt.
- Install the new extractor by placing it into the bolt assembly.
- Insert the extractor spring into the extractor, followed by the O-ring.
- Ensure all components are securely in place and that the extractor moves freely.

### 3. Final Checks

- Reassemble the bolt carrier group and ensure it operates smoothly.
- Conduct a function check of the firearm to ensure proper operation.

### 4. PostInstallation

- Store the firearm in a secure location when not in use.

- Regularly check the extractor assembly for signs of wear or damage.

## **Disposal Instructions**

- Dispose of the extractor assembly and any damaged components in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management authority for proper disposal methods.

## **Contact Information for Further Support**

For any inquiries or further assistance regarding the AR15 Extractor Assembly, please refer to the manufacturer's website or customer support resources. Ensure you have the product details ready for quicker assistance.

By following these safety instructions, you contribute to a safer environment for yourself and others. Thank you for your attention to safety and responsible firearm ownership.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)