

AR-15 EJECTOR ROLL PIN - BROWNEllS BRN AR-15 BOLT EJECTOR ROLL PIN, STEEL

[Rifle Parts](#) > [Bolt Parts](#) > [Ejector Parts](#) > [Ejector Pins](#)

OEM AR-15/M16 replacement Ejector Roll Pin.



Attributes

- Name: [BROWNEllS BRN AR-15 BOLT EJECTOR ROLL PIN, STEEL](#)
- Manufacturer: [BROWNEllS](#)
- Product no.: 100040959
- Mfr. No.: AZ-0006
- Weapon type: AR-15
- Delivery weight: 0.005kg
- Shipping height: 3mm
- Shipping width: 76mm
- Shipping length: 152mm
- UPC: 050806029644

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15 Ejector Roll Pin
- About Us

Safety Instruction Guide for AR15 Ejector Roll Pin

Introduction

Thank you for choosing the AR15 Ejector Roll Pin by BROWNELLS. This guide provides essential safety instructions and information for the proper use, installation, and disposal of the product. It is important to read and understand these guidelines to ensure safe handling and compliance with EU safety regulations.

General Safety Guidelines

- Ensure that you are using the AR15 Ejector Roll Pin in accordance with the manufacturer's specifications.
- Always handle the product with care to prevent injury or damage.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly check for any visible signs of damage before use.
- Report any unsafe products or incidents to the appropriate authorities.
- Stay informed about any recall updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling the product.
- Do not use the Ejector Roll Pin if you are unsure about its condition or functionality.
- Follow all manufacturer guidelines regarding the installation and usage of the product.
- Avoid using excessive force during installation to prevent injury or damage.
- Ensure that the work area is clean, welllit, and free from distractions.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools before starting the installation.
- Ensure that the firearm is unloaded and in a safe condition before proceeding.

2. Installation Steps

- Locate the ejector assembly on your AR15/M16.
- Align the Ejector Roll Pin with the designated hole in the ejector assembly.
- Use a suitable punch tool to carefully drive the roll pin into place. Ensure it is seated correctly without excessive force.

3. PostInstallation Check

- Verify that the Ejector Roll Pin is securely installed and that the ejector functions properly.
- Perform a function check on the firearm to ensure everything is working as intended.

4. Usage

- The Ejector Roll Pin is designed for use in AR15/M16 firearms. Ensure compatibility before use.
- Regularly inspect the pin for wear or damage during routine maintenance of your firearm.

Disposal Instructions

- Dispose of the Ejector Roll Pin in accordance with local waste management regulations.
- Do not throw the product into regular household waste.

- If the product is damaged or no longer usable, contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the AR15 Ejector Roll Pin, please refer to the manufacturer's website or customer service for assistance. It is crucial to have access to reliable support for any safety inquiries.

Thank you for following these safety guidelines. Your attention to these instructions helps ensure a safe and effective experience with your AR15 Ejector Roll Pin.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk