

VICTORY TRIGGER SHOES FOR RUGER® 10/22® - TANDEMROSS

VICTORY TRIGGER SHOE FOR RUGER® 10/22® BLACK

[Handgun Parts](#) > [Trigger Group Parts](#) > [Trigger Parts](#) > [Triggers](#)

The factory Ruger® 10/22® trigger stands out in the rimfire market for its crisp feel and light trigger pull. But even good triggers can be made GREAT! The new TANDEMROSS "Victory" Trigger for the Ruger® 10/22® is the ultimate 10/22® trigger upgrade - ideal for speed shooting competitors! The TANDEMROSS "Victory" Trigger removes nearly all pre-travel upon installation, and comes with post-travel adjustment screw to allow each shooter customize their 10/22® trigger upgrade. The skeletonized, lightweight design of the TANDEMROSS "Victory" trigger provides a flat face that allows the shooter to pull straight back and makes it easier to tell if they are pulling too far to the left or right. In addition to actually reducing the trigger pull weight by up to .5lb, the flat-faced design also allows the operator to place their finger lower on the trigger, increasing leverage and giving the perception of an even lower pull weight. The textured Ruger® 10/22® trigger provides a no-slip surface regardless of speed or weather and allows for short, repeatable, identical trigger pulls. The trigger is made from aircraft-grade aluminum to be lightweight and durable. The TANDEMROSS "Victory" Trigger for Ruger® 10/22® is one of the best Ruger® upgrades for competition shooters. Get yours today and take a giant step closer to VICTORY! 10/22® Victory trigger shoe is compatible with stock trigger housing, sear, hammer and disconnector. 10/22® Victory Trigger Shoe by itself is not compatible with Ruger®'s BX® trigger housing. The "Ultimate" Trigger Kit plus Ruger® stock disconnector will be required for compatibility with Ruger®'s BX® Trigger.



Attributes

- Name: [TANDEMROSS VICTORY TRIGGER SHOE FOR RUGER® 10/22® BLACK](#)
- Manufacturer: [TANDEMROSS](#)
- Product no.: 100041150
- Mfr. No.: TK18N0329BLK1
- Finish: Black
- Model: 10/22
- Style: Shoe
- Weapon type: Ruger
- Delivery weight: 0.011kg
- Shipping height: 13mm
- Shipping width: 76mm
- Shipping length: 102mm
- UPC: 769498484517

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- VICTORY TRIGGER SHOES FOR RUGER® 10/22® Safety Instruction Guide
- About Us

VICTORY TRIGGER SHOES FOR RUGER® 10/22®

Safety Instruction Guide

Introduction

Thank you for choosing the TANDEMROSS VICTORY TRIGGER SHOES for your Ruger® 10/22®. This product is designed to enhance your shooting experience while ensuring safety during use. Please read this safety instruction guide carefully to ensure proper installation and usage.

General Safety Guidelines

- Ensure that you are familiar with the operation of your Ruger® 10/22® firearm before using the VICTORY TRIGGER SHOES.
- Always treat your firearm as if it is loaded, even when you believe it is not.
- Keep the firearm pointed in a safe direction at all times.
- Store the VICTORY TRIGGER SHOES and your firearm in a secure location, out of reach of children and unauthorized users.
- Regularly inspect your trigger shoes and firearm for any signs of wear or damage.
- Follow all local laws and regulations regarding the use of firearms and firearm accessories.

Specific Safety Precautions for Use

- *Compatibility:* Ensure that the VICTORY TRIGGER SHOES are compatible with your Ruger® 10/22® model. The trigger shoe is not compatible with Ruger®'s BX® trigger housing without additional components.
- *Installation:* Follow the installation instructions carefully to avoid improper installation, which may lead to malfunction or unsafe operation.
- *Trigger Pull:* Be aware that the VICTORY TRIGGER SHOES can reduce trigger pull weight. Practice safe handling and ensure you are comfortable with the new trigger feel before engaging in live shooting.
- *Weather Conditions:* Be cautious when using your firearm in adverse weather conditions. The textured surface of the trigger shoe provides a noslip surface, but maintain control at all times.

Instructions for Installation and Usage

1. Installation:

- Ensure your firearm is unloaded before beginning the installation process.
- Remove the stock trigger housing from your Ruger® 10/22®.
- Carefully install the VICTORY TRIGGER SHOES according to the manufacturer's instructions.
- Adjust the posttravel adjustment screw to your preferred setting.
- Reassemble the trigger housing and ensure all components are securely in place.
- Conduct a function check to ensure that the trigger operates smoothly and safely.

2. Usage:

- Once installed, familiarize yourself with the new trigger feel. Practice dry firing in a safe environment to gain confidence.
- When ready to shoot, always follow the basic rules of firearm safety.
- Maintain a firm grip on your firearm and ensure that your finger is off the trigger until you are ready to shoot.

Disposal Instructions

- Dispose of any packaging materials responsibly and in accordance with local regulations.
- If the VICTORY TRIGGER SHOES are no longer needed or are damaged beyond repair, dispose of them in a manner that prevents unauthorized use.
- Follow local laws regarding the disposal of firearm parts and accessories.

Contact Information for Further Support

For any inquiries or concerns regarding the VICTORY TRIGGER SHOES, please refer to the manufacturer's contact information provided with your product packaging.

Thank you for your attention to these safety guidelines. Enjoy your enhanced shooting experience with the TANDEMROSS VICTORY TRIGGER SHOES for your Ruger® 10/22®. Stay safe and shoot responsibly!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk