

VICTORY TRIGGER SHOES FOR RUGER® 10/22® - TANDEMROSS

VICTORY TRIGGER SHOE FOR RUGER® 10/22® RED

[Handgun Parts](#) > [Trigger Group Parts](#) > [Trigger Parts](#) > [Triggers](#)

The factory Ruger® 10/22® trigger stands out in the rimfire market for its crisp feel and light trigger pull. But even good triggers can be made GREAT! The new TANDEMROSS "Victory" Trigger for the Ruger® 10/22® is the ultimate 10/22® trigger upgrade - ideal for speed shooting competitors! The TANDEMROSS "Victory" Trigger removes nearly all pre-travel upon installation, and comes with post-travel adjustment screw to allow each shooter customize their 10/22® trigger upgrade. The skeletonized, lightweight design of the TANDEMROSS "Victory" trigger provides a flat face that allows the shooter to pull straight back and makes it easier to tell if they are pulling too far to the left or right. In addition to actually reducing the trigger pull weight by up to .5lb, the flat-faced design also allows the operator to place their finger lower on the trigger, increasing leverage and giving the perception of an even lower pull weight. The textured Ruger® 10/22® trigger provides a no-slip surface regardless of speed or weather and allows for short, repeatable, identical trigger pulls. The trigger is made from aircraft-grade aluminum to be lightweight and durable. The TANDEMROSS "Victory" Trigger for Ruger® 10/22® is one of the best Ruger® upgrades for competition shooters. Get yours today and take a giant step closer to VICTORY! 10/22® Victory trigger shoe is compatible with stock trigger housing, sear, hammer and disconnector. 10/22® Victory Trigger Shoe by itself is not compatible with Ruger®'s BX® trigger housing. The "Ultimate" Trigger Kit plus Ruger® stock disconnector will be required for compatibility with Ruger®'s BX® Trigger.



Attributes

- Name: [TANDEMROSS VICTORY TRIGGER SHOE FOR RUGER® 10/22® RED](#)
- Manufacturer: [TANDEMROSS](#)
- Product no.: 100041151
- Mfr. No.: TK18N0329RED1
- Finish: Red
- Model: 10/22
- Style: Shoe
- Weapon type: Ruger
- Delivery weight: 0.011kg
- Shipping height: 13mm
- Shipping width: 76mm
- Shipping length: 102mm
- UPC: 769498484524

Item details

Made in USA

US export classification: 0A501.c

Table of Contents

- Startpage
- VICTORY TRIGGER SHOES FOR RUGER® 10/22® Safety Instruction Guide
- About Us

VICTORY TRIGGER SHOES FOR RUGER® 10/22®

Safety Instruction Guide

Introduction

Thank you for choosing the TANDEMROSS VICTORY TRIGGER SHOES for your Ruger® 10/22®. This guide provides essential safety information to ensure the safe use and installation of your new trigger upgrade. Please read this manual carefully before use to maximize safety and performance.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Keep your finger off the trigger until you are ready to shoot.
- Ensure the firearm is pointed in a safe direction at all times.
- Use the product only for its intended purpose.
- Be aware of your surroundings and ensure a safe shooting environment.
- Store the product and all firearms in a secure location, out of reach of children and unauthorized users.
- Regularly inspect your firearm and trigger for wear or damage.
- Be mindful of local laws and regulations regarding firearm modifications.

Specific Safety Precautions for Use

- Do not use the VICTORY TRIGGER SHOES if you are not familiar with firearm operation and safety.
- Ensure that the firearm is unloaded before installation.
- Avoid altering any other components of your firearm without professional guidance.
- If you experience any issues with the trigger operation, discontinue use immediately and consult a qualified gunsmith.
- Keep the trigger and surrounding area clean and free from debris to ensure proper function.
- Use appropriate safety gear, such as eye and ear protection, when shooting.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools for installation (e.g., screwdriver, wrench).

2. Installation:

- Remove the stock trigger housing from the Ruger® 10/22®.
- Carefully install the VICTORY TRIGGER SHOE onto the existing trigger mechanism.
- Adjust the posttravel adjustment screw as needed to customize the trigger feel.
- Reassemble the trigger housing, ensuring all components are securely fastened.

3. Testing:

- After installation, conduct a function check to ensure proper operation.
- Pull the trigger multiple times to ensure it operates smoothly without any hitch.
- If any irregularities are observed, consult a qualified gunsmith before use.

4. Usage:

- Use the trigger only with the Ruger® 10/22®.

- Regularly check the trigger for proper function and wear.

Disposal Instructions

- Dispose of any packaging materials in accordance with local regulations.
- If the product is no longer in use, ensure it is disposed of in a way that prevents unauthorized access.
- Follow local guidelines for the disposal of any firearm components.

Contact Information for Further Support

For any questions or concerns regarding the VICTORY TRIGGER SHOES, please consult the manufacturer or a qualified gunsmith for assistance. Ensure you have the product details and any relevant information on hand for a more efficient support experience.

Conclusion

By following these safety guidelines and instructions, you can ensure a safe and enjoyable experience with your TANDEM CROSS VICTORY TRIGGER SHOES for Ruger® 10/22®. Thank you for prioritizing safety and performance in your shooting experience.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk