

AR-15 DISCONNECTOR SPRING - SONS OF LIBERTY GUN WORKS DISCONNECTOR SPRING FOR AR-15

[Rifle Parts](#) > [Triggers Parts](#) > [Disconnecter Parts](#) > [Disconnecter Springs](#)

Sons of Liberty Gun Works factory OEM Disconnector Spring for Mil-Spec AR-15s.



Attributes

- Name: [SONS OF LIBERTY GUN WORKS DISCONNECTOR SPRING FOR AR-15](#)
- Manufacturer: [SONS OF LIBERTY GUN WORKS](#)
- Product no.: 100045026
- Mfr. No.: DISCONNECTORSPR
- Weapon type: AR-15
- Delivery weight: 0.454kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 102mm
- UPC: 785939517620

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15 Disconnector Spring
- About Us

Safety Instruction Guide for AR15 Disconnector Spring

Introduction

Thank you for choosing the AR15 Disconnector Spring by Sons of Liberty Gun Works. This guide provides important safety instructions and guidelines for the proper use and maintenance of this product. Please read this document carefully to ensure safe handling and installation.

General Safety Guidelines

- Ensure that you are familiar with the operation of your AR15 firearm before using this product.
- Always follow local laws and regulations regarding firearm modifications and usage.
- Handle all firearm components with care to prevent accidents and injuries.
- Store all firearm parts, including this disconnector spring, in a secure location away from children and unauthorized users.
- Regularly inspect your firearm and its components for wear or damage.
- In case of any malfunction or uncertainty regarding the use of this product, consult a qualified gunsmith.

Specific Safety Precautions for Use

- Only use this disconnector spring with MilSpec AR15 firearms.
- Ensure that the firearm is unloaded before beginning any installation or maintenance work.
- Wear appropriate safety gear, including safety glasses, when working with firearms.
- Be cautious of potential pinch points during installation.
- Avoid using excessive force during installation to prevent damage to the spring or firearm.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools for installation, including a punch and hammer.
- Ensure that your work area is clean and free of distractions.

2. Disassembly:

- Unload the firearm completely.
- Remove the upper and lower receivers of the AR15 as per the manufacturer's instructions.
- Take out the existing disconnector spring if applicable.

3. Installation:

- Insert the new disconnector spring into the designated slot in the lower receiver.
- Ensure the spring is seated properly and is aligned with the disconnector.
- Reassemble the lower receiver and upper receiver according to the manufacturer's guidelines.

4. Final Checks:

- Inspect the installation to ensure that the disconnector spring is correctly positioned.
- Perform a function check to verify that the disconnector operates properly.
- Store the firearm safely after installation.

Disposal Instructions

- Dispose of any old or damaged disconnector springs in accordance with local regulations.
- Do not dispose of firearm components in regular household waste.
- Consider recycling options available in your area for metal parts.

Contact Information for Further Support

For any inquiries or concerns regarding the safety or performance of the AR15 Disconnector Spring, please contact the manufacturer or a qualified firearms professional.

Remember to regularly check for updates and safety information regarding your product on relevant safety platforms. By following these guidelines, you can ensure safe and effective use of your AR15 Disconnector Spring. Thank you for prioritizing safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk