

# RS75/RS62 WAVE SPRING - RIFLESPEED RS75/RS62 WAVE SPRING

[Rifle Parts](#) > [Gas System Parts](#) > [Gas Pistons](#)

Replacement Wave Spring for your Riflespeed Gas Control. Made in the USA from 17-7 Stainless Steel. If you keep spare parts on hand for repairs then add a couple of these to your kit. Also available as part of the Riflespeed Rebuild Kit.



## Attributes

- Name: [RIFLESPEED RS75/RS62 WAVE SPRING](#)
- Manufacturer: [RIFLESPEED](#)
- Product no.: 100050273
- Mfr. No.: US0116
- Delivery weight: 0.136kg
- Shipping width: 108mm
- Shipping length: 159mm

## Item details

Made in USA

# Table of Contents

- Startpage
- RS75/RS62 Wave Spring Safety Instructions
- About Us

# RS75/RS62 Wave Spring Safety Instructions

## Introduction

Thank you for choosing the RS75/RS62 Wave Spring for your Riflespeed Gas Control system. This guide provides essential safety instructions to ensure the safe and effective use of this product. Please read all sections carefully before installation and use.

## General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in this guide.
- Always keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the wave spring for signs of wear or damage before each use.
- If you notice any defects or abnormalities, discontinue use immediately and seek assistance.
- Report any unsafe conditions or accidents to the relevant authorities.
- Stay informed about product recalls and safety updates via the EU Safety Gate platform.

## Specific Safety Precautions for Use

- Wear appropriate personal protective equipment (PPE), such as safety goggles and gloves, during installation and handling.
- Do not exceed the recommended specifications for the RS75/RS62 Wave Spring.
- Ensure that all components of the gas control system are compatible with the wave spring.
- Avoid using the product in extreme temperatures or environments that may compromise its integrity.
- Follow all manufacturer guidelines and recommendations for maintenance and usage.

## Instructions for Installation and Usage

### 1. Preparation:

- Gather all necessary tools and components for installation.
- Ensure the work area is clean and free of distractions.

### 2. Installation Steps:

- Remove the existing wave spring from the Riflespeed Gas Control.
- Inspect the gas control system for any debris or damage.
- Carefully insert the new RS75/RS62 Wave Spring into the designated area.
- Ensure that the wave spring is seated correctly and securely.
- Reassemble any components that were removed during the installation process.

### 3. Usage:

- Once installed, test the gas control system to ensure proper functionality.
- Monitor the performance of the wave spring during use, looking for any signs of malfunction or wear.
- If any issues arise, stop using the product immediately and consult a professional.

## Disposal Instructions

- Dispose of the RS75/RS62 Wave Spring in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Consider recycling the wave spring if facilities are available in your area.

## **Contact Information for Further Support**

For any questions or concerns regarding the RS75/RS62 Wave Spring, please refer to the manufacturer's contact information provided with your product packaging or visit the manufacturer's website for further assistance.

Thank you for your attention to these safety instructions. Your safety is our priority.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)