

# RAM PRIME PRIMING UNIT - LEE PRECISION LEE RAM PRIME

[Reloading](#) > [Priming Tools](#) > [Priming Tool Accessories](#)

The Lee Ram Prime allows your press to perform the priming operation on the up-stroke for more "feel" and leverage. Lee Ram Prime fits all brands of single station presses, for both large and small primers. Uses universal press-type shellholders.



## Attributes

- Name: [LEE PRECISION LEE RAM PRIME](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 100053067
- Mfr. No.: 90106
- Delivery weight: 0.068kg
- Shipping height: 30mm
- Shipping width: 30mm
- Shipping length: 79mm
- UPC: 734307901066

## Item details

Made in USA

# Table of Contents

- Startpage
- Safety Instruction Guide for the RAM PRIME PRIMING UNIT
- About Us

# Safety Instruction Guide for the RAM PRIME PRIMING UNIT

## Introduction

Thank you for choosing the RAM PRIME PRIMING UNIT by Lee Precision. This guide provides essential safety instructions and operational guidelines to ensure the safe use of the product. Please read this guide carefully before using the unit to avoid hazards and ensure a safe experience.

## General Safety Guidelines

- Always ensure the product is used in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the unit for any damage before use. Do not use if damaged.
- Use the product in a wellventilated area to avoid inhalation of any dust or debris.
- Do not modify the product or use it for purposes other than intended.
- Report any unsafe products or incidents to the relevant authorities.

## Specific Safety Precautions for Use

- Use personal protective equipment (PPE) such as safety glasses and gloves when operating the unit.
- Ensure that the press is stable and secure before beginning the priming operation.
- Avoid wearing loose clothing or jewelry that may get caught in the machinery.
- Do not exceed the recommended capacity of the unit.
- Keep hands and other body parts away from moving parts during operation.
- Always follow the instructions for loading primers, ensuring they are seated correctly.

## Instructions for Installation and Usage

### 1. Installation:

- Ensure the press is turned off and unplugged before installation.
- Attach the Lee Ram Prime to the press according to the manufacturer's instructions.
- Use the universal presstype shellholders compatible with your press.
- Secure the unit firmly to avoid any movement during operation.

### 2. Usage:

- Place the appropriate size primer into the shellholder.
- Adjust the press for the desired priming depth.
- Operate the press on the upstroke to perform the priming operation, ensuring a firm grip.
- Regularly check for any misalignment or issues during operation.

## Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in general waste if it contains hazardous materials.
- Recycle components where possible to minimize environmental impact.

## Contact Information for Further Support

For any inquiries regarding safety or operational issues, please refer to the manufacturer's contact point as

indicated on the packaging or product documentation.

By following these safety instructions, you can ensure a safe and effective experience with the RAM PRIME PRIMING UNIT. Always prioritize safety and responsible use when handling this product.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)