

# MCR FRONT SIGHT ASSEMBLY - FIGHTLITE INDUSTRIES MCR FRONT SIGHT ASSEMBLY

[Rifle Parts](#) > [Sights](#) > [Front Sights](#)

For use on MCR® barrel windage & elevation adjustable. Fits all models of MCR ® Shrike 5.56™ and military AMG 2.



## Attributes

- Name: [FIGHTLITE INDUSTRIES MCR FRONT SIGHT ASSEMBLY](#)
- Manufacturer: [FIGHTLITE INDUSTRIES](#)
- Product no.: 100075010
- Mfr. No.: 15090
- Colour: Stainless
- Model: MCR
- Style: Assembly
- Weapon type: Fightlite Industries
- Delivery weight: 0.052kg
- Shipping height: 13mm
- Shipping width: 54mm
- Shipping length: 140mm
- UPC: 854118002865

## Item details

Made in USA

# Table of Contents

- [Startpage](#)
- [MCR Front Sight Assembly Safety Instruction Guide](#)
- [About Us](#)

# MCR Front Sight Assembly Safety Instruction Guide

## Introduction

Thank you for choosing the MCR Front Sight Assembly by Fightlite Industries. This guide provides essential safety instructions and guidelines for the safe use, installation, and disposal of your product. Please read this document carefully to ensure proper use and compliance with safety regulations.

## General Safety Guidelines

- Ensure the product is suitable for your specific firearm model before installation.
- Always handle firearms safely and responsibly, following all local laws and regulations.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for signs of wear or damage before each use.
- Familiarize yourself with the features and functions of your firearm and the front sight assembly.
- Report any unsafe product experiences or accidents to the appropriate authorities.

## Specific Safety Precautions for Use

- Only use the MCR Front Sight Assembly with compatible models: MCR® Shrike 5.56™ and military AMG 2.
- Ensure that the windage and elevation adjustments are set correctly before use.
- Do not modify the assembly or use it in a manner not intended by the manufacturer.
- Avoid using the product in extreme weather conditions that could affect its performance.
- Wear appropriate eye and ear protection when using your firearm.

## Instructions for Installation and Usage

### 1. Installation Steps:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove the existing front sight if applicable.
- Align the MCR Front Sight Assembly with the mounting point on your firearm.
- Securely fasten the assembly using the provided screws and tools, ensuring it is tightly fitted.
- Adjust the windage and elevation settings as needed for accurate aiming.

### 2. Usage Instructions:

- Before firing, doublecheck that the assembly is securely installed.
- Make necessary adjustments to the sight for optimal accuracy.
- After use, clean the assembly to prevent corrosion and maintain performance.

## Disposal Instructions

- Dispose of the MCR Front Sight Assembly in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management facility for proper disposal methods.

## Contact Information for Further Support

For any inquiries or further assistance regarding the MCR Front Sight Assembly, please reach out to the EU-based contact point provided by the manufacturer. Ensure you have the product details ready for a more

efficient response.

Thank you for your attention to these safety guidelines. Your safety and satisfaction are our top priorities.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)