

MCR REAR SIGHT ASSEMBLY - FIGHTLITE INDUSTRIES MCR REAR SIGHT ASSEMBLY

[Rifle Parts](#) > [Sights](#) > [Rear Sights](#)

For use on MCR® rifles and upper receiver assemblies, windage and elevation adjustable, mounts on MIL STD 1913 Pic Rail on MCR Feed and Top Cover Assemblies, Base machined from 6065 T6 aluminum billet, Base Hard Coat Anodized per MIL A 8625F, Type III, Class 2. Made in USA.



Attributes

- Name: [FIGHTLITE INDUSTRIES MCR REAR SIGHT ASSEMBLY](#)
- Manufacturer: [FIGHTLITE INDUSTRIES](#)
- Product no.: 100075011
- Mfr. No.: 15091
- Colour: Black
- Model: MCR
- Style: Assembly
- Weapon type: Fightlite Industries
- Delivery weight: 0.043kg
- Shipping height: 29mm
- Shipping width: 76mm
- Shipping length: 121mm
- UPC: 859714006989

Item details

Made in USA

Table of Contents

- Startpage
- MCR Rear Sight Assembly Safety Instructions
- About Us

MCR Rear Sight Assembly Safety Instructions

Introduction

Thank you for choosing the MCR Rear Sight Assembly from Fightlite Industries. This product is designed for use with MCR® rifles and upper receiver assemblies. To ensure safe and effective use of your rear sight assembly, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Ensure that the product is used according to the manufacturer's instructions.
- Always handle firearms and firearm accessories with care.
- Keep the product out of reach of children and unauthorized persons.
- Regularly inspect the product for any signs of wear or damage before use.
- Report any unsafe products or incidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always ensure that your firearm is unloaded before installing or adjusting the rear sight assembly.
- Do not use the rear sight assembly if it is damaged or shows signs of wear.
- Be aware of your surroundings and ensure a safe environment when using your firearm.
- Avoid pointing the firearm at anything you do not intend to shoot.
- Use eye and ear protection when firing your firearm.
- Follow all local laws and regulations regarding firearm usage.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded.
- Locate the MIL STD 1913 Pic Rail on the MCR Feed and Top Cover Assemblies.
- Align the base of the MCR Rear Sight Assembly with the Pic Rail.
- Securely mount the assembly by tightening the mounting screws.

2. Adjustment:

- Windage Adjustment: Use the windage adjustment knob to align the sight as per your shooting requirements.
- Elevation Adjustment: Use the elevation adjustment knob to set the sight for the desired range.

3. Usage:

- Once installed, verify that the sight is securely attached before using the firearm.
- Regularly check the adjustments to ensure they remain accurate.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in household waste.
- For proper disposal methods, contact your local waste management authority.

Contact Information for Further Support

For any inquiries regarding the MCR Rear Sight Assembly, please contact the manufacturer or your local dealer. It is recommended to have your purchase details ready for reference when seeking assistance.

Please remember that safety is paramount when handling firearms and accessories. By following these guidelines, you can help ensure a safe and enjoyable experience with your MCR Rear Sight Assembly.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk