

MCR FEED CAM LEVER ARM SPRING - FIGHTLITE INDUSTRIES MCR FEED CAM LEVER ARM SPRING

[Home](#)

Spare or Replacement Feed cam return spring. Fits all models of MCR ® , Shrike 5.56™ and military AMG 2.



Attributes

- Name: [FIGHTLITE INDUSTRIES MCR FEED CAM LEVER ARM SPRING](#)
- Manufacturer: [FIGHTLITE INDUSTRIES](#)
- Product no.: 100075017
- Mfr. No.: 15084
- Model: MCR
- Weapon type: Fightlite Industries
- Delivery weight: 0.005kg
- Shipping height: 3mm
- Shipping width: 54mm
- Shipping length: 146mm
- UPC: 859714006415

Item details

Made in USA

Table of Contents

- Startpage
- MCR Feed Cam Lever Arm Spring Safety Instruction Guide
- About Us

MCR Feed Cam Lever Arm Spring Safety Instruction Guide

Introduction

Thank you for choosing the MCR Feed Cam Lever Arm Spring by Fightlite Industries. This guide provides essential safety instructions and information to ensure the safe and effective use of the product. Please read this guide carefully before using the spring to understand how to operate it safely and avoid potential hazards.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in this guide.
- Always follow the manufacturer's instructions for installation and usage to avoid accidents.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before use.
- If you notice any defects or malfunctions, discontinue use immediately and seek assistance.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear when handling the spring.
- Avoid contact with moving parts during operation to prevent injury.
- Do not modify the product in any way; alterations can compromise safety and functionality.
- Ensure the spring is installed correctly to prevent malfunction.
- Store the product in a dry, cool place away from direct sunlight and moisture.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and materials before starting the installation.
- Ensure you are working in a clean, welllit area.

2. Installation:

- Carefully remove the spring from its packaging.
- Identify the correct location for installation as per the manufacturer's specifications.
- Align the spring with the designated mounting points.
- Securely fasten the spring using the appropriate tools, ensuring it is firmly in place.

3. Usage:

- Before using the MCR Feed Cam Lever Arm, ensure that the spring is properly installed and functioning.
- Follow the operational guidelines for the MCR system to ensure safe use.
- Regularly check the spring during use for any signs of wear or damage.

Disposal Instructions

- Dispose of the product in accordance with local regulations for nonhazardous materials.
- Do not dispose of the product in household waste. Instead, take it to a designated recycling center if available.
- Ensure that any packaging materials are also disposed of responsibly.

Contact Information for Further Support

For any inquiries regarding safety or product support, please consult the manufacturer's website or contact your local distributor for assistance.

By adhering to these guidelines, you can ensure the safe operation of the MCR Feed Cam Lever Arm Spring and contribute to a safer environment for all users. Thank you for your attention to these safety instructions.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk