

MCR MAIN ACTION SPRING - FIGHTLITE INDUSTRIES MCR MAIN ACTION SPRING

[Home](#)

For use with belt fed MCR ® rifles and upper receiver assemblies.



Attributes

- Name: [FIGHTLITE INDUSTRIES MCR MAIN ACTION SPRING](#)
- Manufacturer: [FIGHTLITE INDUSTRIES](#)
- Product no.: 100075034
- Mfr. No.: 15076
- Model: MCR
- Weapon type: Fightlite Industries
- Delivery weight: 0.059kg
- Shipping height: 25mm
- Shipping width: 102mm
- Shipping length: 406mm
- UPC: 854118002315

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [MCR MAIN ACTION SPRING Safety Instruction Guide](#)
- [About Us](#)

MCR MAIN ACTION SPRING Safety Instruction Guide

Introduction

Thank you for choosing the MCR MAIN ACTION SPRING from Fightlite Industries. This guide provides essential safety instructions to ensure the safe use and handling of the product. Please read this manual carefully to understand the safety guidelines, precautions, and usage instructions.

General Safety Guidelines

- Ensure that you are familiar with the operation of beltfed rifles and upper receiver assemblies before using this product.
- Always handle the MCR MAIN ACTION SPRING with care to prevent accidents.
- Store the product in a secure location, out of reach of children and unauthorized users.
- Regularly inspect the product for any signs of wear or damage before each use.
- Follow all local laws and regulations regarding the use of firearms and related accessories.
- Report any unsafe products or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always ensure that the firearm is unloaded before installing or removing the MCR MAIN ACTION SPRING.
- Use protective eyewear and hearing protection while handling firearms.
- Avoid using the product in wet or damp conditions to prevent malfunction.
- Never modify or alter the MCR MAIN ACTION SPRING in any way.
- Keep your fingers away from the trigger until you are ready to shoot.
- Be aware of your surroundings and ensure that the area is clear before discharging a firearm.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is completely unloaded.
- Locate the upper receiver assembly of your MCR rifle.
- Carefully insert the MCR MAIN ACTION SPRING into the designated slot, ensuring it is seated properly.
- Doublecheck that the spring is securely in place before proceeding.

2. Usage:

- Load the firearm according to the manufacturer's instructions.
- Always maintain a firm grip on the firearm while in use.
- Follow standard firing procedures and ensure that all safety mechanisms are engaged when not in use.

Disposal Instructions

- Dispose of the MCR MAIN ACTION SPRING in accordance with local regulations for hazardous materials.
- Do not dispose of the product in regular household waste.
- Contact your local waste management authority for guidance on proper disposal methods.

Contact Information for Further Support

For any inquiries or concerns regarding the MCR MAIN ACTION SPRING, please reach out to the appropriate support channels provided by Fightlite Industries. Ensure you have your product details ready for efficient assistance.

By following these safety instructions, you can help ensure a safe and enjoyable experience with your MCR MAIN ACTION SPRING. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk