

FLIP-OPEN OBJECTIVE LENS COVERS - BUTLER CREEK OBJECTIVE LENS COVER #27 1.840" (46.7MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [BUTLER CREEK OBJECTIVE LENS COVER #27 1.840" \(46.7MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000019
- Mfr. No.: 30270
- Colour: Black
- End Fit: Objective
- Model Number: 1.840" (46.7mm)
- Size: 1.84
- Delivery weight: 0.027kg
- Shipping height: 41mm
- Shipping width: 69mm
- Shipping length: 122mm
- UPC: 051525302704

Table of Contents

- [Startpage](#)
- [FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS](#)
- [About Us](#)

FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the FLIPOPEN OBJECTIVE LENS COVERS from BUTLER CREEK. These lens covers are designed to protect your scope's lenses from damage during tactical and hunting situations. This guide provides essential safety information and instructions for the proper use and maintenance of your lens covers, ensuring a safe and enjoyable experience.

General Safety Guidelines

- Always inspect the lens covers before use to ensure they are in good condition.
- Keep lens covers out of reach of children and vulnerable individuals to avoid accidental injury.
- Use the product only for its intended purpose—protecting your scope lenses.
- Do not attempt to modify or repair the lens covers yourself.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Ensure that the lens covers fit securely on your scope to prevent them from falling off during use.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals, as this may damage the material.
- Do not force the covers open; use gentle finger pressure to flip them open.
- If the lens covers become damaged or show signs of wear, discontinue use and replace them immediately.
- Be cautious while handling the scope with lens covers attached to avoid accidental drops.

Instructions for Installation and Usage

1. Measuring Your Scope

- Measure the diameter of your scope eyepiece or objective to determine the correct size of lens cover needed.
- Refer to the sizing chart provided by the manufacturer for guidance.

2. Installing the Lens Covers

- Align the lens cover with the eyepiece or objective lens of your scope.
- Gently press the cover onto the lens until it fits snugly.
- Ensure that the cover is secure and does not obstruct the lens.

3. Using the Lens Covers

- To open the lens cover, apply gentle finger pressure to flip it open.
- The cover will spring up and out of the way, allowing you to use your scope without obstruction.
- After use, close the lens cover to protect the lens from dust and moisture.

Disposal Instructions

- Dispose of any damaged or unusable lens covers in accordance with local waste disposal regulations.
- Do not dispose of lens covers in regular household waste if they are made of recyclable materials. Check local recycling guidelines.

Contact Information for Further Support

For any inquiries regarding the safety or proper use of your FLIPOPEN OBJECTIVE LENS COVERS, please refer to the manufacturer's contact information provided with your product packaging.

Thank you for your attention to these safety instructions. Enjoy using your FLIPOPEN OBJECTIVE LENS COVERS and ensure your scope remains protected in all situations.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk