

# FLIP-OPEN OBJECTIVE LENS COVERS - OBJECTIVE LENS COVER #28 1.890" (48.0MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

## Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



## Attributes

- Name: [OBJECTIVE LENS COVER #28 1.890" \(48.0MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000021
- Mfr. No.: 30280
- Color: Black
- End Fit: Objective
- Model Number: 1.890" (48.0MM)
- Size: 1.89
- Delivery weight: 0.068kg
- Shipping height: 41mm
- Shipping width: 69mm
- Shipping length: 122mm
- UPC: 051525302803

# Table of Contents

- Startpage
- FLIOPEN OBJECTIVE LENS COVERS Safety Instruction Guide
- About Us

# FLIPOOPEN OBJECTIVE LENS COVERS Safety Instruction Guide

## Introduction

Thank you for choosing the FLIPOOPEN OBJECTIVE LENS COVERS, designed to protect your scope's lenses during tactical and hunting situations. This guide provides essential safety instructions to ensure the safe use and maintenance of the product. Please read this guide carefully before use.

## General Safety Guidelines

- Always inspect the lens covers before use to ensure they are in good condition.
- Keep the lens covers out of reach of children and vulnerable individuals to prevent accidental injury.
- Do not use the lens covers for purposes other than intended.
- Be aware of your surroundings when using the lens covers to avoid accidents during tactical or hunting situations.
- Report any unsafe products or incidents to the appropriate authorities.

## Specific Safety Precautions for Use

- Ensure that the lens covers are securely attached to the scope before use.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals that may degrade the material.
- Do not force the cover to open or close; use gentle finger pressure to operate the flip mechanism.
- If the lens covers become damaged, discontinue use immediately and replace them.
- When not in use, store the lens covers in a dry, cool place to maintain their condition.

## Instructions for Installation and Usage

### Installation

1. Measure the diameter of your scope eyepiece or objective to ensure you have the correct size lens cover.
2. Align the lens cover with the eyepiece or objective of the scope.
3. Firmly press the lens cover onto the scope until it fits snugly.
4. Ensure that the cover is securely attached and does not wobble.

### Usage

- To open the lens cover, apply gentle finger pressure to the designated area until the cover flips open.
- Ensure that the cover is fully open and out of the way before using the scope.
- After use, close the lens cover by gently pressing it back into place until it clicks shut.

## Disposal Instructions

- Dispose of the lens covers in accordance with local regulations for plastic materials.
- Do not incinerate or expose the lens covers to open flames.
- If the lens covers are damaged, follow local guidelines for hazardous waste disposal if applicable.

## Contact Information for Further Support

For any questions or concerns regarding the FLIPOOPEN OBJECTIVE LENS COVERS, please refer to the contact information provided by the retailer or manufacturer. Ensure you have the product details handy for assistance.

By following these safety instructions, you can ensure a safe and effective experience with your FLIOPEN OBJECTIVE LENS COVERS. Thank you for your attention to safety.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)