

FLIP-OPEN OBJECTIVE LENS COVERS - OBJECTIVE LENS COVER #10 1.500" (38.1MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [OBJECTIVE LENS COVER #10 1.500" \(38.1MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000045
- Mfr. No.: 30100
- Color: Black
- End Fit: Objective
- Model Number: 1.500" (38.1MM)
- Size: 1.5
- Delivery weight: 0.068kg
- Shipping height: 38mm
- Shipping width: 71mm
- Shipping length: 122mm
- UPC: 051525301004

Table of Contents

- Startpage
- FLIOPEN OBJECTIVE LENS COVERS Safety Instruction Guide
- About Us

FLIPOOPEN OBJECTIVE LENS COVERS Safety Instruction Guide

Introduction

Thank you for choosing the FLIPOOPEN OBJECTIVE LENS COVERS. This product is designed to protect your scope's lenses from damage during tactical and hunting situations. This safety instruction guide provides essential information on how to use, install, and dispose of the product safely, ensuring compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always inspect the lens covers for any damage before use. Do not use if damaged.
- Ensure the lens covers are properly fitted to the eyepiece and objective of your scope.
- Keep lens covers out of reach of children to prevent accidental choking or injury.
- Use the product only for its intended purpose.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform regularly.

Specific Safety Precautions for Use

- Do not force the cover open; use gentle finger pressure to flip it open.
- Avoid using sharp objects to remove or adjust the lens covers, as this may cause damage.
- Ensure that the lens covers are securely closed when not in use to protect the lenses from dust and moisture.
- Do not expose the lens covers to extreme temperatures or direct sunlight for prolonged periods.
- If you experience any difficulty with the lens covers, discontinue use and seek assistance.

Instructions for Installation and Usage

1. Measuring Your Scope:

- Measure the diameter of your scope's eyepiece or objective using a ruler.
- Refer to the provided chart to select the correct size lens cover.

2. Installing the Lens Covers:

- Align the lens cover with the eyepiece or objective.
- Gently press the cover onto the lens until it is securely in place.
- Ensure the cover fits snugly without any gaps.

3. Using the Lens Covers:

- To open the cover, apply gentle finger pressure on the edge of the cover.
- The cover will spring open and stay out of the way during use.
- Once finished, close the cover securely to protect the lenses.

4. Removing the Lens Covers:

- To remove the lens cover, gently pull it away from the eyepiece or objective.
- Store the cover in a safe place when not in use.

Disposal Instructions

- Dispose of the lens covers in accordance with local regulations.
- Do not dispose of the product in household waste if it contains electronic components.
- Consider recycling the product if possible, to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the FLIOPEN OBJECTIVE LENS COVERS, please refer to the contact information provided with your product packaging or visit the manufacturer's website for additional support.

Thank you for prioritizing safety while using the FLIOPEN OBJECTIVE LENS COVERS. Enjoy your tactical and hunting experiences with peace of mind!

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at