

FLIP-OPEN OBJECTIVE LENS COVERS - OBJECTIVE LENS COVER #31 1.998" (50.7MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [OBJECTIVE LENS COVER #31 1.998" \(50.7MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000046
- Mfr. No.: 30310
- Color: Black
- End Fit: Objective
- Model Number: 1.998" (50.7MM)
- Size: 1.998
- Delivery weight: 0.005kg
- Shipping height: 41mm
- Shipping width: 69mm
- Shipping length: 122mm
- UPC: 051525303107

Table of Contents

- Startpage
- FLIOPEN OBJECTIVE LENS COVERS Safety Instruction Guide
- About Us

FLIPOOPEN OBJECTIVE LENS COVERS Safety Instruction Guide

Introduction

Thank you for choosing the FLIPOOPEN OBJECTIVE LENS COVERS. This product is designed to protect your scope's lenses from damage in various conditions, including tactical and hunting situations. To ensure your safety and the proper use of this product, please read through this safety instruction guide carefully.

General Safety Guidelines

- Always ensure that the lens covers are properly fitted to your scope to avoid any accidental detachment during use.
- Regularly inspect the lens covers for any signs of wear and tear. Replace if damaged.
- Keep the lens covers clean and free from debris to ensure optimal performance.
- Do not use the lens covers in a manner inconsistent with the manufacturer's instructions.
- Always store the lens covers in a safe place when not in use to prevent accidental damage or loss.

Specific Safety Precautions for Use

- Do not force the lens covers open or closed. Use gentle finger pressure to flip them open.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals, as this may affect their integrity.
- Keep lens covers away from children unless supervised by an adult, as small parts may pose a choking hazard.
- If the lens cover becomes stuck, do not apply excessive force. Check for any obstructions before attempting to open it again.

Instructions for Installation and Usage

1. Measuring Your Scope:

- Measure the diameter of your scope eyepiece or objective using a caliper or measuring tape.
- Refer to the provided chart to select the appropriate lens cover size.

2. Installing the Lens Covers:

- Align the lens cover with the scope's eyepiece or objective.
- Gently press the cover onto the lens until it fits securely.
- Ensure that the cover is properly seated to avoid any gaps.

3. Using the Lens Covers:

- To open the lens cover, apply light finger pressure to the designated area until it springs open.
- Ensure the cover is fully opened and secured away from the lens before using the scope.
- When finished, close the lens cover by gently pressing it back into place.

Disposal Instructions

- Dispose of any damaged or worn lens covers in accordance with local waste disposal regulations.
- Do not dispose of lens covers in fire, as they may release harmful substances.

Contact Information for Further Support

For any safety inquiries or further assistance, please reach out to the designated EUbased contact point provided by the manufacturer. It is important to have access to support for any productrelated questions or concerns.

Conclusion

By following these guidelines and instructions, you can ensure the safe use of your FLIOPEN OBJECTIVE LENS COVERS. Remember to stay informed about product safety and report any unsafe conditions or incidents to the relevant authorities. Thank you for prioritizing your safety and the safety of others.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at