

FLIP-OPEN OBJECTIVE LENS COVERS - OBJECTIVE LENS COVER #1 1.00" (25.4MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [OBJECTIVE LENS COVER #1 1.00" \(25.4MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000048
- Mfr. No.: MO30010
- Color: Black
- End Fit: Objective
- Model Number: 1.00" (25.4MM)
- Size: 1
- Delivery weight: 0.227kg
- Shipping height: 5mm
- Shipping width: 71mm
- Shipping length: 119mm
- UPC: 051525300106

Table of Contents

- [Startpage](#)
- [FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS](#)
- [About Us](#)

FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the FLIPOPEN OBJECTIVE LENS COVERS. These covers are designed to protect your scope's lenses from weather, dust, and moisture during tactical and hunting situations. This guide provides essential safety instructions to ensure the safe and effective use of this product in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the FLIPOPEN OBJECTIVE LENS COVERS are used only for their intended purpose.
- Regularly inspect the covers for any signs of wear or damage before use.
- Keep the covers out of reach of children to prevent accidental injury or misuse.
- If you encounter any issues with the product, discontinue use and report the problem to the appropriate authorities.

Specific Safety Precautions for Use

- Always ensure that the covers are securely attached to the scope before use to prevent them from detaching during operation.
- Avoid using excessive force when flipping the covers open or closed, as this may cause damage to the mechanism.
- Do not expose the covers to extreme temperatures or harsh chemicals, as this may compromise their protective features.
- If the covers become dirty, clean them with a soft, damp cloth. Avoid using abrasive materials that could scratch the surface.

Instructions for Installation and Usage

1. Measuring the Scope:

- Measure the diameter of your scope's eyepiece or objective to ensure you select the correct size of lens cover.

2. Attaching the Covers:

- Align the cover with the eyepiece or objective of the scope.
- Gently press the cover onto the scope until it fits snugly.

3. Using the Covers:

- To open the cover, apply light finger pressure on the designated area. The cover will spring open.
- Ensure the cover is fully opened and out of the way before using the scope.
- To close the cover, gently push it back into place until it clicks securely.

4. Storing the Covers:

- When not in use, keep the lens covers attached to the scope or store them in a dry, safe place to avoid loss or damage.

Disposal Instructions

- Dispose of the FLIPOPEN OBJECTIVE LENS COVERS in accordance with local waste disposal regulations.
- If the product is damaged or no longer usable, ensure it is disposed of in an environmentally friendly manner, such as recycling if applicable.

Contact Information for Further Support

For any safety inquiries or concerns regarding the FLIPOPEN OBJECTIVE LENS COVERS, please contact your local retailer or visit the manufacturer's website.

These instructions are designed to help you use the FLIPOPEN OBJECTIVE LENS COVERS safely and effectively. By following these guidelines, you can ensure the longevity of your product and maintain safety during its use. Thank you for your attention to these important safety measures.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at