

FLIP-OPEN OBJECTIVE LENS COVERS - OBJECTIVE LENS COVER #23 1.760" (44.7MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [OBJECTIVE LENS COVER #23 1.760" \(44.7MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120000051
- Mfr. No.: 30230
- Color: Black
- End Fit: Objective
- Model Number: 1.760" (44.7MM)
- Size: 1.76
- Delivery weight: 0.023kg
- Shipping height: 38mm
- Shipping width: 69mm
- Shipping length: 122mm
- UPC: 051525302308

Table of Contents

- Startpage
- FLIOPEN OBJECTIVE LENS COVERS Safety Instruction Guide
- About Us

FLIPOOPEN OBJECTIVE LENS COVERS Safety Instruction Guide

Introduction

Thank you for choosing the FLIPOOPEN OBJECTIVE LENS COVERS. These lens covers are designed to protect your scope's lenses from weather, dust, and moisture during tactical and hunting situations. This guide provides important safety information and instructions for proper use and care of the product.

General Safety Guidelines

- Ensure the product is used only for its intended purpose.
- Keep the lens covers out of reach of children to prevent any accidents or misuse.
- Regularly inspect the lens covers for damage or wear, and replace them if necessary.
- Be aware of your surroundings during use to avoid potential hazards.

Specific Safety Precautions for Use

- Always check that the lens covers are securely attached before use to prevent them from falling off.
- Avoid applying excessive force when flipping the covers open; they should spring up easily with light finger pressure.
- Do not use the lens covers if they are damaged or if you notice any defects.
- Ensure that the lens covers do not obstruct your view while using the scope.

Instructions for Installation and Usage

1. Measuring for Fit:

- Measure the diameter of your scope's eyepiece or objective to determine the correct lens cover size. Refer to the provided chart for guidance.

2. Installation:

- Align the lens cover with the eyepiece or objective.
- Press the cover onto the lens until it fits snugly. Ensure it is secure and will not come loose during use.

3. Using the Lens Covers:

- To open the lens cover, apply light finger pressure to flip it open. The cover should spring up and out of the way.
- After use, close the lens cover to protect the lens from environmental factors.

4. Maintenance:

- Clean the lens covers with a soft, dry cloth to remove dust and debris.
- Avoid using harsh chemicals or abrasive materials that could damage the covers.

Disposal Instructions

- Dispose of the lens covers in accordance with local regulations for plastic waste.
- Do not dispose of the lens covers in household waste if they are marked as recyclable; instead, use designated recycling facilities.

Contact Information for Further Support

For any safety inquiries or additional support, please refer to the manufacturer's contact details provided with your product packaging or visit the manufacturer's website.

Conclusion

By following these safety instructions, you can ensure the safe use of your FLIPOOPEN OBJECTIVE LENS COVERS. Always prioritize safety and maintenance to extend the life of your product and enhance your tactical and hunting experiences. Thank you for your attention to these important guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at