

BLIZZARD SCOPE LENS COVERS - BUTLER CREEK BLIZZARD LENS COVER #2 1.3-1.39" (33.0-35.3MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Clear, See-Thru Caps Flip Open With Just A Touch

Spring-loaded, flip-open scope covers allow fast, thru-the-scope sighting for quick, off-hand shots. Impact resistant, polymer lenses keep your scope lens dry and clear during inclement weather and ready for your next shot.



Attributes

- Name: [BUTLER CREEK BLIZZARD LENS COVER #2 1.3-1.39" \(33.0-35.3MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120250002
- Mfr. No.: 70202
- Colour: Black
- Model Number: 1.3-1.39" (33.0-35.3MM)
- Size: 1.3,1.300,1.34,1.341,1.387,1.388,1.39
- Delivery weight: 0.023kg
- Shipping height: 38mm
- Shipping width: 69mm
- Shipping length: 119mm
- UPC: 051525702023

Table of Contents

- Startpage
- Safety Instruction Guide for BLIZZARD SCOPE LENS COVERS BUTLER CREEK BLIZZARD LENS COVER #2
- About Us

Safety Instruction Guide for BLIZZARD SCOPE LENS COVERS BUTLER CREEK BLIZZARD LENS COVER #2

Introduction

Thank you for choosing the BLIZZARD SCOPE LENS COVERS by Butler Creek. This guide provides essential safety instructions and usage guidelines to ensure your product is used safely and effectively. Please read this document carefully before use.

General Safety Guidelines

- Ensure that the scope lens covers are compatible with your scope size (1.31.39 inches or 33.035.3 mm).
- Always inspect the lens covers before each use for any signs of damage or wear.
- Keep the lens covers clean and free from debris to maintain visibility and performance.
- Store the lens covers in a dry place when not in use to prevent moisture buildup.
- Be aware of your surroundings when using the scope to avoid accidents.

Specific Safety Precautions for Use

- Do not use the lens covers if they are cracked or damaged, as this may impair functionality.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals that may degrade the material.
- Ensure that the lens covers are securely fastened before use to prevent them from opening unintentionally.
- Use caution when flipping the lens covers open or closed to avoid pinching fingers.
- Keep lens covers out of reach of children to prevent accidental use or injury.

Instructions for Installation and Usage

1. Installation:

- Remove the lens covers from the packaging.
- Align the lens covers with the scope lens, ensuring they fit securely.
- Gently press the covers onto the lens until they click into place.

2. Usage:

- To use the scope, simply flip open the lens covers by pressing the springloaded mechanism.
- Ensure that the covers are fully open before aiming your scope.
- After use, close the lens covers to protect the lenses from dust and moisture.

Disposal Instructions

- Dispose of the lens covers responsibly according to local regulations.
- Do not dispose of the lens covers in general waste if they are made from recyclable materials. Check for recycling options in your area.

Contact Information for Further Support

For any safety inquiries or further assistance, please contact the manufacturer or your local distributor. Ensure

that you have the product details ready for reference.

Thank you for following these safety instructions. Your safety and satisfaction are our top priorities. Enjoy using your BLIZZARD SCOPE LENS COVERS!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk