

BLIZZARD SCOPE LENS COVERS - BUTLER CREEK BLIZZARD LENS COVER #3 1.4-1.49" (35.6-37.9MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Clear, See-Thru Caps Flip Open With Just A Touch

Spring-loaded, flip-open scope covers allow fast, thru-the-scope sighting for quick, off-hand shots. Impact resistant, polymer lenses keep your scope lens dry and clear during inclement weather and ready for your next shot.



Attributes

- Name: [BUTLER CREEK BLIZZARD LENS COVER #3 1.4-1.49" \(35.6-37.9MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120250003
- Mfr. No.: 70203
- Colour: Black
- Model Number: 1.4-1.49" (35.6-37.9MM)
- Size: 1.4,1.429,1.432,1.45,1.457,1.468,1.485
- Delivery weight: 0.023kg
- Shipping height: 38mm
- Shipping width: 69mm
- Shipping length: 122mm
- UPC: 051525702030

Table of Contents

- Startpage
- BLIZZARD SCOPE LENS COVERS SAFETY INSTRUCTIONS
- About Us

BLIZZARD SCOPE LENS COVERS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the BLIZZARD SCOPE LENS COVERS by BUTLER CREEK. These lens covers are designed to provide reliable protection for your scope lenses, ensuring clarity and dryness during various weather conditions. This safety instruction guide aims to provide you with essential information for the safe use, installation, and disposal of this product in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure safe handling and usage of the product.
- Keep the product out of reach of children to prevent accidents.
- Regularly inspect the lens covers for any signs of damage or wear.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about recalls or safety alerts through the EU Safety Gate platform.

Specific Safety Precautions for Use

- Use the lens covers only for their intended purpose.
- Do not force the covers open or closed; they are springloaded and designed for easy operation.
- Avoid exposing the lens covers to extreme temperatures or direct sunlight for prolonged periods.
- Do not use the lens covers if they show signs of damage, such as cracks or breaks.
- If the lens covers become dirty, clean them gently with a soft cloth to avoid scratching.

Instructions for Installation and Usage

1. Installation:

- Ensure your scope is clean and free of debris before installing the lens covers.
- Align the lens covers with the scope lenses.
- Gently press the covers onto the lenses until they fit securely.

2. Usage:

- To use the scope, simply flip open the lens covers by applying light pressure.
- After use, close the covers to protect the lenses from dust and moisture.
- Always check that the covers are securely closed when not in use.

Disposal Instructions

- Dispose of the product in accordance with local waste disposal regulations.
- If the lens covers are damaged or no longer usable, do not throw them in regular household waste.
- Check for recycling options in your area for polymer materials.

Contact Information for Further Support

For any questions or concerns regarding the BLIZZARD SCOPE LENS COVERS, please refer to the product packaging or visit the manufacturer's website for additional support and information.

Thank you for following these safety instructions. Your safety and satisfaction are our top priorities. Enjoy your experience with the BLIZZARD SCOPE LENS COVERS!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk