

BLIZZARD SCOPE LENS COVERS - BLIZZARD LENS COVER #7 1.8-1.89" (45.7-48.0MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Clear, See-Thru Caps Flip Open With Just A Touch

Spring-loaded, flip-open scope covers allow fast, thru-the-scope sighting for quick, off-hand shots. Impact resistant, polymer lenses keep your scope lens dry and clear during inclement weather and ready for your next shot.



Attributes

- Name: [BLIZZARD LENS COVER #7 1.8-1.89" \(45.7-48.0MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 120250007
- Mfr. No.: 70207
- Color: Black
- Model Number: 1.8-1.89" (45.7-48.0MM)
- Size: 1.8,1.82,1.84,1.89
- Delivery weight: 0.027kg
- Shipping height: 41mm
- Shipping width: 69mm
- Shipping length: 119mm
- UPC: 051525702078

Table of Contents

- Startpage
- BLIZZARD SCOPE LENS COVERS SAFETY INSTRUCTION GUIDE
- About Us

BLIZZARD SCOPE LENS COVERS SAFETY INSTRUCTION GUIDE

Introduction

Thank you for choosing the BLIZZARD SCOPE LENS COVERS. This guide provides essential safety instructions and guidelines to ensure the safe and effective use of your scope lens covers. Please read this document carefully before use to maximize your safety and the longevity of the product.

General Safety Guidelines

- Always handle the scope lens covers with care to avoid damage.
- Ensure that the scope lens covers are compatible with your specific scope model.
- Keep the lens covers out of reach of children and pets to prevent accidental ingestion or injury.
- Regularly inspect the lens covers for any signs of wear or damage.
- Report any unsafe conditions or product malfunctions to the appropriate authorities.

Specific Safety Precautions for Use

- Do not force the lens covers open or closed if they appear stuck; this may cause damage.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals, as this can compromise their integrity.
- Ensure the lens covers are securely attached to the scope before use to prevent accidental detachment during operation.
- Always check that the lens is clean and clear before taking a shot to ensure optimal visibility.
- In inclement weather, ensure that the lens covers are properly closed to keep the scope lens dry.

Instructions for Installation and Usage

1. Installation:

- Align the lens covers with the corresponding ends of your scope.
- Gently press the covers into place until you hear a click, indicating they are securely attached.
- Ensure that the covers are not obstructing the view through the scope.

2. Usage:

- To open the lens covers, simply press the release button or slide the mechanism (depending on the model).
- Make sure the lens covers are fully open before attempting to take a shot.
- After use, always close the lens covers to protect the lenses from dust and moisture.

Disposal Instructions

- Dispose of the lens covers in accordance with local regulations for plastic waste.
- Do not incinerate the product, as it may release harmful substances.
- If the product is damaged or no longer usable, please recycle the materials when possible.

Contact Information for Further Support

For further assistance and support, please refer to the product packaging or visit the manufacturer's website for contact details. Always ensure that you have the product information available when seeking support.

Thank you for your attention to these safety guidelines. Your safety and satisfaction are our top priorities. Enjoy using your BLIZZARD SCOPE LENS COVERS!

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at