

# SPORTING CLAYS SPEED WRENCH - CARLSONS SPORTING CLAY SPEED WRENCH 12 GAUGE

[Gunsmith Tools](#) > [Shotgun Tools](#) > [Choke Tube Wrenches](#)

## Speed Handle Makes Changing Tubes Fast

Crank and handle provide both speed and leverage for quickly removing choke tubes. Large, easy-to-grip knob expands the vinyl, non-marking gripping surface that's inserted into the tube.



## Attributes

- Name: [CARLSONS SPORTING CLAY SPEED WRENCH 12 GAUGE](#)
- Manufacturer: [CARLSONS](#)
- Product no.: 155102012
- Mfr. No.: 06601
- Gauge: 12 Gauge
- Weapon type: Universal Shotguns
- Delivery weight: 0.091kg
- Shipping height: 10mm
- Shipping width: 89mm
- Shipping length: 180mm
- UPC: 723189066017

## Item details

Made in USA

# Table of Contents

- Startpage
- Safety Instruction Guide for Sporting Clays Speed Wrench
- About Us

# Safety Instruction Guide for Sporting Clays Speed Wrench

## Introduction

Thank you for choosing the Carlson's Sporting Clays Speed Wrench for your 12 gauge shotgun. This product is designed to provide speed and leverage when removing choke tubes. Please read this safety instruction guide carefully to ensure safe and effective use of the wrench.

## General Safety Guidelines

- Ensure the product is used only for its intended purpose.
- Always handle the wrench with care to avoid injury.
- Store the wrench in a safe place, out of reach of children.
- Regularly inspect the wrench for any signs of damage or wear.
- If you notice any defects, discontinue use immediately and contact customer support.

## Specific Safety Precautions for Use

- Always ensure the shotgun is unloaded before using the wrench.
- Do not use excessive force when removing or installing choke tubes.
- Avoid using the wrench in wet or slippery conditions to prevent accidents.
- Do not modify the wrench in any way, as this may compromise its safety.
- Keep hands clear of the wrench's moving parts during use.

## Instructions for Installation and Usage

### 1. Preparation:

- Ensure the shotgun is completely unloaded.
- Gather the choke tubes you intend to remove or install.

### 2. Using the Wrench:

- Insert the vinyl, nonmarking gripping surface of the knob into the choke tube.
- Firmly grasp the large knob for a secure grip.
- Turn the crank handle to loosen or tighten the choke tube as needed.
- Do not apply excessive force; if the choke tube does not move, check for obstructions.

### 3. Post Use:

- After use, clean the wrench to remove any debris.
- Store the wrench in a dry place, away from children.

## Disposal Instructions

- Dispose of the wrench responsibly according to local regulations.
- If the wrench is damaged beyond repair, consider recycling the materials where possible.

## Contact Information for Further Support

For any safety inquiries or support, please refer to the manufacturer's contact details provided with the product packaging.

By following these safety instructions, you can ensure a safe and effective experience with your Carlson's Sporting Clays Speed Wrench. Always prioritize safety and do not hesitate to reach out for assistance if needed.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)