

WHEELS - CRATEX WHEEL, FINE, #86 WHEEL, 1/16" ARBOR

[Gunsmith Tools](#) > [Power Tools & Accessories](#) > [Rubber Abrasive Tools](#) > [Rubber Abrasive Wheels](#)

#74 Straight Edge Wheel, 7/8" (22.2mm) diameter, 1/8" thick. #86 Straight Edge Wheel, 1" diameter, 3/16" (4.76mm) thick.



Attributes

- Name: [CRATEX WHEEL, FINE, #86 WHEEL, 1/16" ARBOR](#)
- Manufacturer: [CRATEX](#)
- Product no.: 190025863
- Mfr. No.:
- Delivery weight: 0.091kg
- Shipping height: 13mm
- Shipping width: 64mm
- Shipping length: 175mm

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for WHEELS CRATEX WHEEL, FINE, #86 WHEEL, 1/16" ARBOR](#)
- [About Us](#)

Safety Instruction Guide for WHEELS CRATEX WHEEL, FINE, #86 WHEEL, 1/16" ARBOR

Introduction

Thank you for choosing the CRATEX WHEELS CRATEX WHEEL, FINE, #86 WHEEL, 1/16" ARBOR. This guide provides essential safety instructions to ensure the safe use of this product. Please read it carefully before using the wheels.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always follow the manufacturer's instructions for safe operation.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the wheels for wear, damage, or defects before use.
- Use personal protective equipment (PPE) such as safety goggles, gloves, and a dust mask when operating the wheels.
- Be aware of your surroundings and ensure that the work area is clean and free of hazards.

Specific Safety Precautions for Use

- Do not exceed the maximum RPM rating specified for the wheels.
- Avoid using the wheels on materials that may cause excessive heat buildup, as this can lead to wheel damage or failure.
- Ensure that the arbor size is compatible with your tool before installation.
- Do not force the wheels into tight spaces or use them inappropriately.
- Always maintain a firm grip on the tool when using the wheels to prevent loss of control.
- Never use damaged or worn wheels; replace them immediately.

Instructions for Installation and Usage

1. Installation:

- Ensure the tool is unplugged or powered off before installation.
- Remove any existing wheel from the tool.
- Select the appropriate CRATEX wheel (e.g., #74 or #86).
- Align the wheel's arbor hole with the tool's spindle.
- Securely attach the wheel using the appropriate nut or washer, ensuring it is tight and stable.
- Doublecheck that the wheel is properly installed and does not wobble.

2. Usage:

- Power on the tool and allow it to reach the desired speed before making contact with the material.
- Apply light, even pressure while using the wheel; do not press too hard.
- Keep the wheel moving to prevent overheating or burning the material.
- Monitor the wheel for signs of wear or damage during use.
- Turn off the tool and allow the wheel to come to a complete stop before setting it down.

Disposal Instructions

- Dispose of used wheels in accordance with local regulations.
- Do not dispose of the wheels in regular household waste.
- Consider recycling options for the wheels if available in your area.

Contact Information for Further Support

For any safety inquiries, concerns, or to report unsafe products, please contact your local authorities or check the EU's Safety Gate platform for updates and recalls.

Thank you for prioritizing safety and for your attention to these guidelines. Enjoy using your CRATEX wheels responsibly!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk