

5.56MM MAXIMUM HEADSPACE GAUGE - BROWNELLS BRN AR-15/M16 COLT 5.56X45 NATO HEADSPACE GAUGE 1.4736"

[Gunsmith Tools](#) > [Measuring Tools](#) > [Headspace Gauges](#)

Factory Specified Size Measures M16/AR-15 Maximum Headspace

Made to the Colt factory's special dimensions for M16/AR-15 rifles. It measures the maximum factory acceptable headspace; an essential check on guns that have seen extensive service or have been rebarreled.



Attributes

- Name: [BROWNELLS BRN AR-15/M16 COLT 5.56X45 NATO HEADSPACE GAUGE 1.4736"](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 319418033
- Mfr. No.:
- Cartridge: 5.56 mm NATO
- Style: Field Gauge
- Delivery weight: 0.068kg
- Shipping height: 18mm
- Shipping width: 86mm
- Shipping length: 157mm
- UPC: 757253992421

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for 5.56MM Maximum Headspace Gauge
- About Us

Safety Instruction Guide for 5.56MM Maximum Headspace Gauge

Introduction

Thank you for choosing the 5.56MM Maximum Headspace Gauge from Brownells. This product is designed to ensure the safe and accurate measurement of headspace in M16/AR15 rifles. Proper use and understanding of safety guidelines are essential for your safety and the performance of your firearm.

General Safety Guidelines

- Always handle firearms and related tools with care.
- Ensure the gauge is used in a safe environment, free from distractions.
- Keep the gauge out of reach of children and unauthorized users.
- Regularly check the gauge for wear or damage before each use.
- If you notice any defects, do not use the gauge and contact the manufacturer for advice.

Specific Safety Precautions for Use

- Use the gauge only for its intended purpose (measuring headspace in 5.56 mm NATO firearms).
- Do not attempt to modify or alter the gauge in any way.
- Wear appropriate safety gear, such as safety glasses, when using the gauge.
- Ensure the firearm is unloaded and pointed in a safe direction before measuring headspace.
- Follow the firearm manufacturer's guidelines for headspace measurements.

Instructions for Installation and Usage

- Before using the gauge, ensure you have the following:

- A clean and safe workspace.
- The firearm you intend to measure.
- The 5.56MM Maximum Headspace Gauge.

- Follow these steps for use:

1. Preparation:

- Ensure the firearm is completely unloaded.
- Remove any ammunition from the vicinity.

2. Measuring Headspace:

- Insert the gauge into the chamber of the firearm.
- Ensure it fits snugly and does not require excessive force.
- Check the reading on the gauge. It should indicate whether the headspace is within the acceptable limits.

3. Post Use:

- Remove the gauge from the chamber.
- Clean the gauge if necessary and store it in a safe place.

Disposal Instructions

- Dispose of the gauge in accordance with local regulations.
- Do not dispose of the gauge in regular household waste if it is damaged.
- Contact local waste management services for proper disposal methods.

Contact Information for Further Support

For inquiries regarding product safety, usage, or other concerns, please refer to the manufacturer's contact details provided with your product packaging.

Thank you for your attention to these safety instructions. Your safety is our priority.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk