

# FLAT WIRE RECOIL SPRINGS FOR GLOCK® - ISMI 15 LB. SPRING FOR GLOCK® 17

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Springs](#)

## Designed For Maximum Consistency & Reliability

CAD designed and built to Aerospace specifications from chrome silicon, corrosion resistant, stainless steel or chrome vanadium for maximum durability, consistency and reliable performance. Built to aerospace specifications; heat treated, shot peened and fully stress relieved to minimize spring set. GLOCK® RECOIL SPRINGS - Flat wire, chrome vanadium alloy,, wound to fit factory diameter guide rod of .250" or less. GLOCK® 17 fits large frame 17,17L,20,21,22,24,31,35. Factory weight is 17 lb. GLOCK® 19 fits 19,23,25,32. Factory weight is 18 lb.



## Attributes

- Name: [ISMI 15 LB. SPRING FOR GLOCK® 17](#)
- Manufacturer: [ISMI](#)
- Product no.: 445000005
- Mfr. No.: GL15
- Model: 17
- Pounds: 15 lbs
- Weapon type: Glock
- Delivery weight: 0.014kg
- Shipping height: 10mm
- Shipping width: 79mm
- Shipping length: 211mm

## Item details

Made in USA

# Table of Contents

- Startpage
- FLAT WIRE RECOIL SPRINGS FOR GLOCK® ISMI 15 LB. SPRING FOR GLOCK® 17
- About Us

# FLAT WIRE RECOIL SPRINGS FOR GLOCK® ISMI 15 LB. SPRING FOR GLOCK® 17

## Consumer Safety Instruction Guide

### Introduction

Thank you for choosing the FLAT WIRE RECOIL SPRINGS FOR GLOCK® ISMI 15 LB. SPRING FOR GLOCK® 17. This product is designed to enhance the performance of your Glock® firearm while ensuring safety and reliability. Please read this guide carefully to understand how to use and maintain this product safely.

### General Safety Guidelines

To ensure your safety and the safety of others, please follow these general safety guidelines:

- Always ensure that your firearm is unloaded before installing or inspecting the recoil spring.
- Keep the recoil spring and all firearm components out of reach of children.
- Regularly inspect the recoil spring for any signs of wear or damage.
- Use only compatible models as specified in the product description.
- Follow all local laws and regulations regarding firearm modifications and usage.

### Specific Safety Precautions for Use

When using the FLAT WIRE RECOIL SPRINGS, please observe the following precautions:

- Use the recoil spring only with Glock® models specified: 17, 17L, 20, 21, 22, 24, 31, 35 for Glock® 17; and 19, 23, 25, 32 for Glock® 19.
- Ensure that the recoil spring is installed correctly to avoid malfunctions.
- Avoid using the recoil spring if it shows any signs of corrosion or deformation.
- Do not exceed the recommended weight specifications for your specific Glock® model.

### Instructions for Installation and Usage

Follow these instructions carefully for the proper installation and usage of the recoil spring:

#### 1. Preparation

- Ensure that the firearm is completely unloaded.
- Gather necessary tools: a punch tool and a bench block.

#### 2. Installation

- Remove the slide from the frame of the firearm.
- Locate the factory guide rod and recoil spring assembly.
- Carefully remove the old recoil spring from the guide rod.
- Take the new FLAT WIRE RECOIL SPRING and install it onto the guide rod, ensuring it is seated properly.
- Reattach the slide to the frame and ensure it operates smoothly.

#### 3. Usage

- After installation, perform a function check to ensure the firearm operates correctly.
- Regularly clean and maintain the recoil spring as part of your firearm maintenance routine.

## **Disposal Instructions**

When the FLAT WIRE RECOIL SPRINGS are no longer needed or are damaged, please dispose of them responsibly:

- Do not dispose of the recoil spring in regular household waste.
- Check local regulations for recycling or proper disposal methods for metal components.
- Consider returning the product to the manufacturer for recycling if applicable.

## **Contact Information for Further Support**

For any safety inquiries or further support regarding your FLAT WIRE RECOIL SPRINGS, please refer to the manufacturer's contact details provided with your product packaging.

## **Conclusion**

Following these safety instructions will help ensure the safe and effective use of your FLAT WIRE RECOIL SPRINGS FOR GLOCK® ISMI 15 LB. SPRING FOR GLOCK® 17. Always prioritize safety and consult professionals if you are unsure about any aspect of installation or usage. Thank you for your attention to these important safety guidelines.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)