

TWO CHERRIES CHISEL - BROWNELLS CHISEL, STRAIGHT WITH WOOD HANDLE, 14MM

[Gunsmith Tools](#) > [Stock Work & Finishing](#) > [Wood Carving Chisels](#)

Forged-Steel Holds Its Edge; Steel-Hooped, Hornbeam Handles Won't Split

German steel chisels are hardened to Rc 61 for superior strength and sharpness. Hornbeam handles have steel hoops to prevent splitting. Final honing is required prior to use.



Attributes

- Name: [BROWNELLS CHISEL, STRAIGHT WITH WOOD HANDLE, 14MM](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 541000007
- Mfr. No.: 5050114
- Delivery weight: 0.091kg
- Shipping height: 2mm
- Shipping width: 61mm
- Shipping length: 251mm
- UPC: 050806023147

Table of Contents

- Startpage
- TWO CHERRIES CHISEL BROWNELLS 14MM STRAIGHT CHISEL Safety Instruction Guide
- About Us

TWO CHERRIES CHISEL BROWNELLS 14MM STRAIGHT CHISEL Safety Instruction Guide

Introduction

Thank you for purchasing the TWO CHERRIES CHISEL BROWNELLS 14MM STRAIGHT CHISEL. This guide is designed to provide you with important safety instructions and usage information to ensure a safe and effective experience with your chisel. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the chisel is used only for its intended purpose, which is wood carving.
- Always inspect the chisel before use to check for any damage or defects.
- Keep the chisel out of reach of children and vulnerable individuals.
- Use personal protective equipment (PPE) such as safety glasses and gloves when using the chisel.
- Follow all local regulations regarding the use of tools and equipment.

Specific Safety Precautions for Use

- Always use the chisel on a stable and secure surface to prevent slipping.
- Maintain a firm grip on the chisel while in use to avoid accidents.
- Avoid applying excessive force; let the sharpness of the chisel do the work.
- Keep hands and fingers clear of the cutting edge at all times.
- Do not use the chisel if you are tired or under the influence of substances that may impair your judgment.
- Ensure that the work area is welllit and free of clutter.

Instructions for Installation and Usage

1. **Final Honing:** Before using the chisel, ensure that it has been properly honed to achieve the desired sharpness.
2. **Grip:** Hold the chisel firmly by the hornbeam handle with both hands for better control.
3. **Positioning:** Position the chisel at the desired angle to the wood surface for the most effective cut.
4. **Cutting Technique:**
 - Start with light pressure, gradually increasing as needed.
 - Use smooth, controlled motions to guide the chisel through the wood.
5. **Cleaning:** After use, clean the chisel with a dry cloth to remove any wood residue. Avoid using water or solvents that may damage the handle.
6. **Storage:** Store the chisel in a dry place, preferably in a protective case, to prevent damage and maintain sharpness.

Disposal Instructions

- Dispose of the chisel responsibly, following local waste disposal regulations.
- If the chisel is damaged beyond repair, consider recycling the metal and wood components separately if possible.

Contact Information for Further Support

For any safety inquiries or concerns regarding the TWO CHERRIES CHISEL BROWNELLS 14MM STRAIGHT CHISEL, please refer to the manufacturer's contact information provided with your product.

Thank you for your attention to these safety instructions. Enjoy your woodworking projects safely and effectively!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk