

SEMI-AUTO SIGHT MOVER - MGW 1911 AUTO SIGHT MOVER-REAR SIGHTS ONLY

[Gunsmith Tools](#) > [Sight & Scope Installation Tools](#) > [Sight Movers](#)

Adjusts, Removes & Installs Sights Without Damage

Safely moves fixed sights right or left in their dovetails without deforming slide or sight. Specifically designed for use with factory and aftermarket Tritium night sights, which are too fragile for the traditional hammer-and-punch sight installation method; works equally well with iron sights. Thumbscrew securely locks the slide so it's fully supported in the rigid, machined aluminum body. Separate slots in the screw mechanism engage the sight and firmly, yet gently, concentrate screw force to loosen sights from even extremely tight dovetails. Hardened steel handle provides plenty of leverage, while self-lubricating, oil-impregnated Oilite® bronze bearings and extra-fine threads ensure smooth, precise movement. Beretta/Glock fit rear sights only. Glock Flat-Side fits aftermarket rear sights with straight, non-sloped sides for standard- and large-frame Glock pistols. SIG fits rear sights on all SIGs except SIG-PRO. 1911 will not work with most Kimber slide/sight combinations. Only works on rear sights. Not for installing or adjusting front sights.



Attributes

- Name: [MGW 1911 AUTO SIGHT MOVER-REAR SIGHTS ONLY](#)
- Manufacturer: [MGW](#)
- Product no.: 584045001
- Mfr. No.: MGW310
- Model: Commander, Government, Officers
- Weapon type: 1911
- Delivery weight: 0.794kg
- Shipping height: 56mm
- Shipping width: 112mm
- Shipping length: 224mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for SEMIAUTO SIGHT MOVER MGW 1911 AUTO SIGHT MOVER REAR SIGHTS ONLY
- About Us

Safety Instruction Guide for SEMIAUTO SIGHT MOVER MGW 1911 AUTO SIGHT MOVER REAR SIGHTS ONLY

Introduction

Thank you for purchasing the SEMIAUTO SIGHT MOVER MGW 1911 AUTO SIGHT MOVER. This tool is designed to safely move fixed sights right or left in their dovetails without deforming the slide or sight. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that you are familiar with the product before use.
- Always wear appropriate eye protection when using this tool.
- Keep the tool out of reach of children and vulnerable individuals.
- Inspect the tool for any damage before each use. Do not use if damaged.
- Follow all instructions provided in this guide to avoid accidents and injuries.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Only use the SEMIAUTO SIGHT MOVER for rear sights. Do not attempt to install or adjust front sights.
- Ensure that the firearm is unloaded and safe before using the sight mover.
- Use the thumbscrew to securely lock the slide in place before attempting to move the sight.
- Avoid applying excessive force when loosening sights to prevent damage to the dovetails or the sight itself.
- Do not use the sight mover with sights or firearms that are not compatible with the tool.
- Be cautious of sharp edges and moving parts while operating the tool.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is unloaded and in a safe condition.
- Gather all necessary tools and materials, including the SEMIAUTO SIGHT MOVER.

2. Setting Up the Tool

- Place the SEMIAUTO SIGHT MOVER on a stable surface.
- Identify the rear sight that requires adjustment.

3. Locking the Slide

- Use the thumbscrew to securely lock the slide in the rigid, machined aluminum body of the sight mover.

4. Adjusting the Sight

- Align the sight mover with the dovetail of the rear sight.
- Gently turn the screw mechanism to engage the sight.
- Apply steady pressure to loosen the sight from the dovetail. Avoid sudden movements or excessive force.

5. Repositioning the Sight

- Once the sight is loosened, carefully reposition it as needed.
- Lock the sight in place by reversing the adjustment process.

6. Final Checks

- Ensure the sight is securely positioned before removing the firearm from the sight mover.
- Inspect the sight and dovetail for any damage after adjustment.

Disposal Instructions

- Dispose of the SEMIAUTO SIGHT MOVER in accordance with local regulations.
- Do not dispose of the tool in regular household waste.
- Consider recycling the aluminum and steel components if applicable.

Contact Information for Further Support

For any questions or concerns regarding the use of the SEMIAUTO SIGHT MOVER, please refer to the manufacturer's website or customer service for assistance. Always ensure that you are following the latest safety guidelines and product updates.

Thank you for prioritizing safety and responsible use of your SEMIAUTO SIGHT MOVER MGW 1911 AUTO SIGHT MOVER.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk