

RIFLE MODEL MR-L REAR SIGHT - NECG RIFLE ADJUSTABLE MODEL MR-L REAR SIGHT BLACK

[Rifle Parts](#) > [Sights](#) > [Rear Sights](#)

Precision Windage & Elevation Adjustment

Notched, "V"-style blade is fully adjustable for windage and elevation.
Machined from solid steel, polished and blued to compliment the finest sporting rifle.



Attributes

- Name: [NECG RIFLE ADJUSTABLE MODEL MR-L REAR SIGHT BLACK](#)
- Manufacturer: [NECG](#)
- Product no.: 661105830
- Mfr. No.: R-201
- Color: Black
- Make: Universal Rifles
- Style: Adjustable
- Delivery weight: 0.045kg

Table of Contents

- Startpage
- RIFLE MODEL MRL REAR SIGHT NECG Safety Instruction Guide
- About Us

RIFLE MODEL MRL REAR SIGHT NECG Safety Instruction Guide

Introduction

Thank you for choosing the RIFLE MODEL MRL REAR SIGHT NECG. This guide provides essential safety instructions to ensure the safe and effective use of your rear sight. Please read this guide carefully before installation and use to minimize risks and ensure compliance with safety regulations.

General Safety Guidelines

- Always handle firearms responsibly and ensure they are stored securely when not in use.
- Ensure that the rear sight is compatible with your rifle model before installation.
- Regularly inspect the sight and other firearm components for wear or damage.
- Use only the recommended tools and methods for installation and adjustments.
- Keep this product and all firearms out of reach of children and unauthorized users.
- Report any unsafe products or accidents to local authorities immediately.
- Stay informed about product recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always ensure the firearm is unloaded before installing or adjusting the rear sight.
- Do not attempt to adjust the sight while the firearm is loaded.
- Be aware of your surroundings and ensure a safe shooting environment.
- Use appropriate eye and ear protection when shooting.
- Avoid using the sight in extreme weather conditions that could affect its performance.
- If you experience any issues with the sight, cease use immediately and seek professional assistance.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools, including a drill, tap, and appropriate screws (836).
- Ensure the firearm is unloaded and pointed in a safe direction.

2. Installation

- If soldering, apply a suitable solder to attach the rear sight to the firearm.
- For drill and tap installation:
 - Mark the desired position on the firearm for the rear sight base.
 - Drill a hole at the marked position using the correct drill bit size.
 - Tap the hole to accommodate the 836 screw.
 - Align the rear sight with the drilled hole and secure it using the screw.

3. Adjustment

- Use the notched, "V" style blade to adjust for windage and elevation as needed.
- Make small adjustments and test the sighting to ensure accuracy.

4. Usage

- Once installed, practice using the rear sight in a safe environment.
- Familiarize yourself with the adjustments for optimal performance during shooting.

Disposal Instructions

- Dispose of the rear sight in accordance with local regulations for metal waste.
- Ensure that all components are disposed of safely to prevent any potential hazards.

Contact Information for Further Support

For any inquiries or safety concerns regarding the RIFLE MODEL MRL REAR SIGHT NECG, please contact the manufacturer or your local distributor. Ensure you have the product information ready for a more efficient response.

Remember, safety is paramount when handling firearms and accessories. By following this guide, you will help ensure a safe and enjoyable shooting experience. Thank you for your attention to these important safety instructions.

About Us

Brownells Europe

Brownells Europe - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

P.O.Box 4300
Warwick
CV34 9BR

www.brownells.eu