

SIG SAUER 320 EXTRACTOR SPRING PIN

[Handgun Parts](#) > [Action Parts](#) > [Extractor Parts](#) > [Extractors](#)

Sig Sauer factory Extractor Spring Pin for the P320.



Attributes

- Name: [SIG SAUER 320 EXTRACTOR SPRING PIN](#)
- Manufacturer: [SIG SAUER, INC.](#)
- Product no.: 732000602
- Mfr. No.: 1301047R
- Make: Sig Sauer
- Model: P320
- Delivery weight: 0.068kg
- Shipping height: 5mm
- Shipping width: 102mm
- Shipping length: 191mm
- UPC: 798681535835

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- SIG SAUER 320 Extractor Spring Pin Safety Instruction Guide
- About Us

SIG SAUER 320 Extractor Spring Pin Safety Instruction Guide

Introduction

Thank you for choosing the SIG SAUER 320 Extractor Spring Pin. This guide provides important safety information and instructions to ensure the safe and effective use of this product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that you are familiar with the operation of your firearm before installing or using the Extractor Spring Pin.
- Always handle firearms with care and treat them as if they are loaded.
- Store the Extractor Spring Pin in a secure location, away from children and unauthorized users.
- Regularly check for any signs of wear or damage to the Extractor Spring Pin and replace it if necessary.
- Follow all local laws and regulations regarding firearm maintenance and modifications.

Specific Safety Precautions for Use

- Only use the Extractor Spring Pin with the SIG SAUER P320 model.
- Do not attempt to modify or alter the Extractor Spring Pin in any way.
- Wear appropriate safety gear, such as safety glasses, when handling or installing the Extractor Spring Pin.
- Ensure that the firearm is unloaded before beginning the installation process.
- Be aware of your surroundings and ensure that you are in a safe environment when working with firearms.

Instructions for Installation and Usage

1. Preparation:

- Ensure that the firearm is completely unloaded.
- Gather necessary tools, including a punch tool suitable for pin installation.

2. Installation:

- Locate the existing Extractor Spring Pin on the SIG SAUER P320.
- Using the punch tool, carefully remove the old Extractor Spring Pin if present.
- Align the new Extractor Spring Pin with the designated hole in the firearm.
- Gently tap the new Extractor Spring Pin into place using the punch tool, ensuring it is securely seated.

3. PostInstallation:

- Inspect the installation to ensure that the Extractor Spring Pin is properly installed and secure.
- Perform a function check of the firearm to ensure proper operation.
- Store any unused parts and tools safely.

Disposal Instructions

- Dispose of any old or damaged Extractor Spring Pins in accordance with local regulations.
- Do not dispose of firearms or firearm components in regular household waste.

- Contact local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any inquiries regarding the SIG SAUER 320 Extractor Spring Pin, please refer to the official SIG SAUER website or your local authorized dealer for assistance.

By following these safety guidelines and instructions, you can ensure the safe use of the SIG SAUER 320 Extractor Spring Pin. Always prioritize safety and responsible firearm handling. Thank you for your attention to these important instructions.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz